# THI

# USER'S GUIDE

colortelevisioncolortelevisioncolo Iortelevisioncolortelevisionco rtelevisioncolortelevisioncolor elevisioncolortelevisioncolorte evisioncolortelevisioncolortele isioncolortelevisioncolortelevis oncolortelevisioncolortelevisio colortelevisioncolortelevisioncolo Iortelevisioncolortelevisioncol rtelevisioncolortelevisioncolor elevisioncolortelevisioncolorte evisioncolortelevisioncolortele isioncolortelevisioncolortelevis oncolortelevisioncolortelevisionc colortelevisioncolortelevisioncolo lortelevisioncolortelevisioncol rtelevisioncolortelevisioncolor elevisioncolortelevisioncolorte evisioncolortelevisioncolortele isioncolortelevisioncolortelevis oncolortelevisioncolortelevisionc colortelevisioncolortelevisioncolo lortelevisioncol televisioncolo ioncolort

rtelevisio elevisio evisio isionc oncolor colorte Iortele rtele

elev

olor

ncolortel

colortele

ncc

ncol

# **IMPORTANT INFORMATION**

#### **WARNING**

To reduce the risk of fire or electric shock, do not expose this TV to rain or moisture.

#### **WARNING**

RISK OF ELECTRIC SHOCK
DO NOT OPEN

To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.




This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

#### Cautions



**CAUTION\***: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**ATTENTION:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu' au fond.

#### Note to Cable TV Installer

Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

**Caution**: If fixed (non-moving) images are left on the screen for long periods, they may be permanently imprinted on the picture tube. Such images include network logos, phone numbers, and video games. This damage is not covered by your warranty. Extended viewing of channels displaying these images should be avoided.

This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

#### Product Registration

Please fill out the product registration card and return it immediately. Returning the card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. The numbers are located on the back of the television.

Model No.	
Serial No	
Purchase Date:	
Dealer/Address/Phone:	

# **TABLE OF CONTENTS**

QUICK GUIDE TO THE TV	3
Startup	3
Understanding the Menus	5
Using Master and Basic Menus	5
Types of Remote Controls	7
USING THE REMOTE	7
Master Remote Buttons (CRK17TD1)	8
Basic Remote Buttons (CRK17TC1)	9
Universal Remote Buttons (CRK76TK1)	10
Using the INPUT Button	12
Using the SYSTEM Button	12
Universal Remote Features  Controlling Components	
PIP (Picture-In-Picture) Operation	
Using the PIP Feature	
MASTER MENUS	17
Audio Menu	17
Picture Quality Menu	19
Channel Menu	20
Access & Power Options Menu	22
Closed Captioning Menu	25
Time and Timers Menu	26
Parental Controls Menu	28
Locked/Unlocked	28
Parental Controls Access	
V-Chip Movie Rating Limit	
V-Chip TV Rating Limit	
TV Age-Based Ratings	
V-Chip Unrated Programs Channel Block	
Password	
Menu Language	
PC Video Input Controls	
Using the PC Video Input Controls	
osing the revided hipat collinois illinini	

# **TABLE OF CONTENTS**

BASIC MENUS	41
Channel Guide	41
Menu Language	
Closed Captioning Menu	
Time and Timers Menu or Sleep Timer	
Picture Presets Menu	
Audio Processor Menu	
Parental Controls Menu	
PC Video Input Controls	44
CONNECTIONS	45
Back of TV: by Model	45
Back of TV: By Model	46
PC INPUT Connection	47
Antenna or Cable Connection	48
Cable Box Connections	49
Cable Box and VCR Basic Connection	50
VCR Basic Connection	50
VCR Intermediate Connection	51
Cable Box and VCR Advanced Connection	51
Audio Connection	52
VCR Advanced Connection	52
REFERENCE	53
Front Panel	53
Status Displays	54
Troubleshooting	55
FCC Information	58
Commercial Products Limited Warranty	59
INDEX	60

#### **STARTUP**

The steps below will get your TV connected and ready to watch. For more details, refer to the chapters listed.

#### **CAUTION:**

If you choose to use a stand with your TV, take precautions that the stand or other furniture the TV is placed on is properly located and of adequate size and strength to prevent the TV from accidentally being tipped over, pushed off, or pulled off. This could cause damage to the TV and/or personal injury.

#### 1. Hook up the TV

See the "Connections" chapter for details.

Hook up any antennas, cables, or other equipment to your TV before you follow the steps below.

#### 2. Plug in the TV

Plug the cord into a properly installed electrical outlet. See the "Safety Information" sheet packed with your TV for more information.

#### 3. Obtain a Master Remote

A master remote (CRK17TD1) is required for setup of many of the TV's features. Most of the operating instructions in this manual are explained using the master remote. (A master remote can be purchased from your distributor. See the "Using the Remote" chapter for details.)

#### 4. Put Batteries in the Remote


- 1. Pull off the cover of the battery compartment.
- Place the two AAA batteries into the remote as shown at right, matching the + and - end of each battery in the compartment.
- 3. Replace the cover.

#### 5. Turn on the TV

Press POWER on the remote.

OR

Press POWER on the TV.

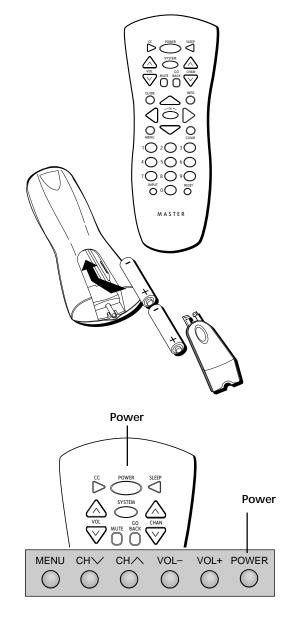

#### 6. Use Point and Select

You only need to know one rule when using the remote to control access to on-screen menus and control panels: point and select. The point and select method has two steps:

- 1. **Point** to a menu item using the arrow buttons on the remote.
  - To point up or down, press the up or down arrows. To point left or right, press the left or right arrows.
- 2. Select a menu item by pressing MENU or OK.

Selecting an item tells the TV's menu system to go ahead and make the change or go to the place you have indicated. To quickly select a numbered menu option, just press the corresponding digit button on the remote control.

#### 7. Place All Available Channels Into Memory

See the "Channel Menu" section of the "Master Menus" chapter for details.

- Press MENU on the remote control, then select Channel, then Auto Channel Search.
- Select which channel list you'd like to find channels for (List A is the default).

Note that inputs (VID, SVID, PC, etc.) must be added to the active channel list separately before they can be accessed. See the "List and Labels" section in the "Master Menus" chapter.


#### 8. Set the Time


To set the time, select automatic setting of the time, or to prevent viewers from accessing the Current Time and Schedule functions, see the "Time and Timers Menu" section of the "Master Menus" chapter.

If the control panel is not set to the current time, use the arrow and digit buttons on the remote control to make changes. You can also enter numbers by using the up and down arrows on the remote.

#### 9. Use the Clone Box

If several TVs need to be programmed with the same menu settings, an optional clone box can be used to copy all of the menu settings from one TV into other TVs to reduce installation time. Information can be both downloaded to and uploaded from the clone box using the DSCI port on the TV's back panel or using the IR sensor. Clone boxes can be obtained from your RCA commercial distributor. Refer to the clone box owner's manual for operating instructions.

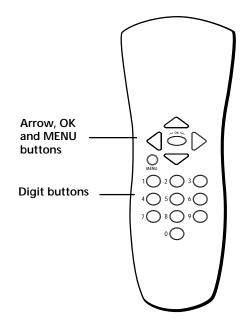

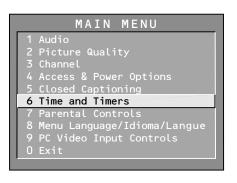

Your initial setup is complete. Please read the "Understanding the Menus" description that follows before customizing menu options. Instructions on setting up and operating more advanced features are given throughout the rest of this manual.

#### UNDERSTANDING THE MENUS

This television displays two levels of menus: master and basic.

The master menus are accessible by pressing MENU on the master remote (CRK17TD1). The master Main menus will always display the eight choices shown at right. A ninth choice, PC Video Input Controls, will appear if the PC input is selected\*.

The basic menus are accessible by pressing MENU on a basic remote (CRK17TC1 or other remote) or the front panel. The choices available on the basic menus and control panels will vary depending on limits set by the master user and the input selected. For more information on the effects of master user choices on the basic menu and basic user functionality, see the "Basic Menus" chapter and the description of the "Access and Power Options Menu" section of the "Master Menus" chapter.

#### USING MASTER AND BASIC MENUS

Menus and choice lists use the point and select rule to navigate, but control panels use a variety of methods to adjust features on your TV. The following pages detail how to use these controls to customize the functions of your TV.

The first menu is called the Main menu. Press MENU on the remote (master remote for master menu; basic or universal remote for basic menu) or on the front panel (basic menu) to bring up the Main menu.


Menu choices take you to another menu or a control panel. There are two ways to select a menu item:

- Point with the arrows and then select with MENU or OK.
- Press a digit button on the remote. For example, in the master Main menu, press 3 to go straight to the Channel menu.

#### Exiting a Menu

There are three ways to exit a menu. Note that not all methods work in all menus:

- Point to Exit and press MENU or OK.
- Press 0 on the remote control.
- Press CLEAR. The on-screen displays are cleared from the screen and you return to TV viewing.

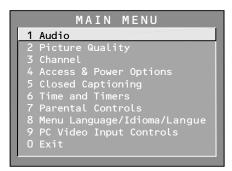

The master Main menu. If the PC input is not selected, the ninth item will not appear\*. See the "Using the Input Button" section in the "Using the Remote" chapter for more information.



The basic Main menu. The choices available in this menu will change according to limits set by the master user.


Pressing MENU on a master remote will allow access to the TV's menu settings unless blocked by clone programming.

<sup>\*</sup> This menu item is only available on models J27530, J326530, and J36530.

#### **Sliders**


Sliders are used to make adjustments to a particular control. To use a Slider in a menu:

- 1. Press the up or down arrow to select the slider control for the feature you want to adjust.
- 2. Press the right or left arrow to adjust the indicator line on the slider.

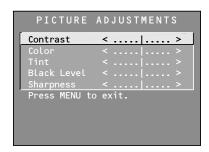

#### **Numeric Entry**

A numeric entry control panel is used to enter numbers or letters. A pointer appears underneath the field you are changing.

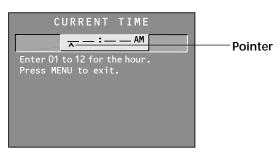


- 1. Use the digit buttons to enter a number in the field above the pointer.
- 2. Press the right arrow to move to the next field, then use the digit buttons to enter a number.
- 3. When you have finished entering information, press MENU or OK.

#### **Choice Lists**

Choice lists are used to choose a particular setting from a list. When the choice list appears, the highlighted item is the one that is currently selected, or "in use."

Point to a choice on a menu using the Arrow buttons and press MENU or OK to select that choice.

Now that you know how to access the menus and adjust the control panels, the rest of this manual provides explanations of master and basic menu items, organized in order of their location on the Main menu.

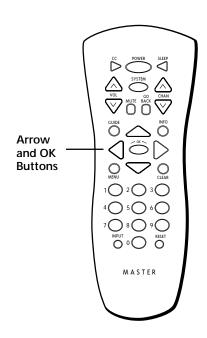



Press the corresponding digit button on the remote to highlight and select in one step.

#### TYPES OF REMOTE CONTROLS

All of the remote controls mentioned here, in addition to other remotes and accessories, are available from your RCA distributor. Descriptions of the remote buttons and how they work are on the next pages. Except as otherwise specified, the master remote is the remote described throughout the manual for operating the TV and setting up the TV's features.

#### **Master Remotes**

The master remote control (CRK17TD1) allows access to all of the TV's menus. It is used to customize the TV's functionality for specific users or specific situations.

#### **Basic Remotes**


The basic remote control (CRK17TC1) is used by the viewer for basic operating functions. It is designed so that the viewer cannot alter certain master remote-specified features. The Sleep, Closed Captioning, and Channel Guide features can be accessed directly with remote buttons.

#### **Universal Remotes**


These remote controls offer basic control of the television within the limits specified through the master remote (i.e., with the same limitations as the CRK17TC1). In addition, they can be programmed to control other components (such as VCRs).

#### **Hospital-Type Remotes**

These specialized remote controls are UL-recognized for use in patient beds. Some offer simple, single-button operation of the TV; others have enhanced capability for greater control. Specific models and requirements depend upon what other devices might also be in the room, such as nurse-call systems. See your distributor for more information.

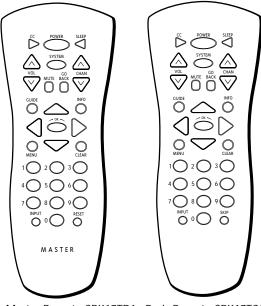

Master Remote CRK17TD1 Basic Remote CRK17TC1



Universal Remote CRK76TK1

If you cannot locate your remote you can use the front panel of your TV to operate the TV's basic features. See the "References" chapter for more information.

#### **MASTER REMOTE BUTTONS (CRK17TD1)**

#### **CC (Closed Captioning)**

Brings up the Closed-Caption Display. Subsequent presses change the display mode.

#### **POWER**

Turns the TV on or off.

#### **SLEEP**

On first press, displays the Sleep Timer control panel, which allows the user to set a time for the TV to turn itself off.
Subsequent presses increase the Sleep Timer's setting by 15-minute increments.

#### VOL (Volume up or down)

Raises and lowers audio volume (unless Volume Hold is on) and displays the Volume Control slider. See the chapter "Master Menus" for more information on Volume Hold.

#### **SYSTEM**

This button allows the remote to change between TV1 and TV2 mode. It also allows access to system-defined functionality, when available. See the description later in this chapter for more details.

#### CHAN (Channel up or down)

Scans up and down through channels in the TV's memory.

#### **MUTE**

Turns the TV audio volume to its minimum level. Press again to restore volume.

#### GO BACK

Tunes to the last selected channel or video input and displays the Status Display.

#### **GUIDE**

Displays or clears the Channel Guide (when not in the menu system).

#### **Arrow Buttons and OK**

Use the arrow buttons to highlight your choices and navigate within the menu system. Use the OK button to select your choice.

#### INFO

Displays or clears the Status Display.

#### MENU

Brings menus to the screen and moves from menu to menu.

#### **CLEAR**

Clears menus and displays from the screen.

#### Digit Buttons (0-9)

Selects an available channel number or numbered menu option.

Two digits must be pressed for each channel. Press 0 then 6 for channel 6.


For three-digit channel numbers, press and hold 1 until "1--" appears on the screen. Then press the other two digits.

#### INPUT

Switches between TV (channels 01-125) and other available inputs. See the description later in this chapter for more details.

#### RESET

Returns the picture to the original settings and displays the Picture Presets choice list.

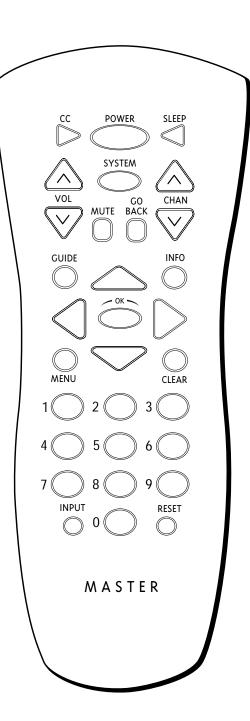

Pressing MENU on a master remote will allow access to the TV's menu settings unless blocked by clone programming.

#### **BASIC REMOTE BUTTONS (CRK17TC1)**

#### **CC (Closed Captioning)**

Brings up the Closed-Caption Display. Subsequent presses change the display mode.

#### **POWER**

Turns the TV on or off.

#### **SLEEP**

On first press, displays the Sleep Timer control panel, which allows the user to set a time for the TV to turn itself off. Subsequent presses increase the Sleep Timer's setting by 15-minute increments.

#### VOL (Volume up or down)

Raises and lowers audio volume (unless Volume Hold is on) and displays the Volume Control slider.

#### **SYSTEM**

This button allows the remote to change between TV1 and TV2 mode. It also allows access to system-defined functionality, when available. See the description later in this chapter for more details.

#### CHAN (Channel up or down)

Scans up and down through channels in the TV's memory.

#### **MUTE**

Turns the TV audio volume to its minimum level. Press again to restore volume

#### **GO BACK**

Tunes the TV to the last selected channel or video input and displays the Status Display.

#### **GUIDE**

Displays or clears the Channel Guide (when not in the menu system).

#### **Arrow Buttons and OK**

Use the arrow buttons to highlight your choices and navigate within the menu system. Use the OK button to select your choice.

#### INFO

Displays or clears the Status Display.

#### **MENU**

Brings menus to the screen and moves from menu to menu.

#### CLEAR

Clears menus and displays from the screen.

#### Digit Buttons (0-9)

Selects channel number or numbered menu option.

Two digits must be pressed for each channel. Press 0 then 6 for channel 6.


For three-digit channel numbers, press and hold 1 until "1--" appears on the screen. Then press the other two digits.

#### INPUT

Switches between TV (channels 01-125) and other available inputs. See description later in this chapter for more details.

#### SKIP (Commercial Skip)

If you press this button before you change the channel, the TV waits 30 seconds then takes you back to the original channel. Each subsequent press adds 30 seconds to the skip time. Press CLEAR to cancel. Also functions as RESET in some menus.

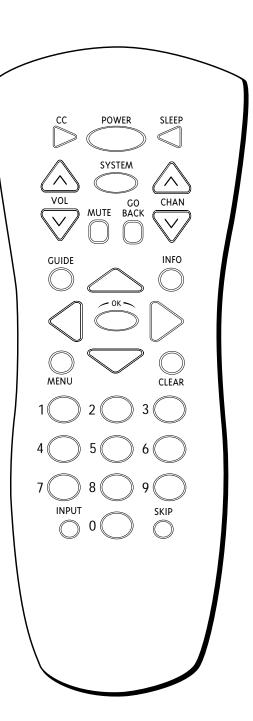

See the "Master Menus" chapter for more information on the Volume Hold feature.

#### **UNIVERSAL REMOTE BUTTONS (CRK76TK1)**

**ON•OFF** Turns the device you are controlling on or off. When pressed twice within two seconds, all devices that are on will be turned off (this feature only works with most RCA, GE, and PROSCAN products). You can also use the ON•OFF button on the front panel of the TV to turn it on or off.

VCR1 When programmed, tells the remote to control the VCR.

**TV1** Tells the remote to control TV1. See the "Access & Power Options Menu" section in the "Master Menus" chapter for more information.

**DVD** Tells the remote to control the DVD player. Note that this button is only functional with RCA, GE, and PROSCAN DVD players.

VCR2 When programmed, tells the remote to control a second VCR.

**LED** This light turns red at each valid button press. When programming the remote control, it flashes or turns on or off to indicate programming status.

**TV2** Tells the remote to control TV2. See the "Access & Power Options Menu" section in the "Master Menus" chapter for more information.

**SAT•CABLE** When programmed, tells the remote to control a digital satellite receiver or cable box.

**MUTE** Reduces the TV's volume to its minimum level. Press again to restore the volume.

**SKIP (Commercial Skip)** If you press this button before you change the channel, the TV waits 30 seconds then takes you back to the original channel. Each subsequent press adds 30 seconds to the skip time. Press CLEAR to cancel. Also functions as RESET in some menus.

CH + (up) and - (down) Use to scan up and down through the channels in the current channel list. You can also use the CH + and - buttons on the TV's front panel to change the channel.

**VOL** < **(down) and** > **(up)** Raises and lowers the audio volume of the TV (unless Volume Hold is on) and displays the volume control slider. See the "Master Menus" chapter for more information.


**CC (Closed Captioning)** Brings up the Closed-Caption Display. Subsequent presses change the display mode.

**SYSTEM** This button allows access to system-defined functionality, when available. See the description later in this chapter for more details.

**GO BACK** Tunes the TV to the last selected channel or input. In the menu system, returns you to the previous screen.

**GUIDE** Displays or clears the Channel Guide (when not in the menu system).

**INFO** Displays or clears the Status Display.

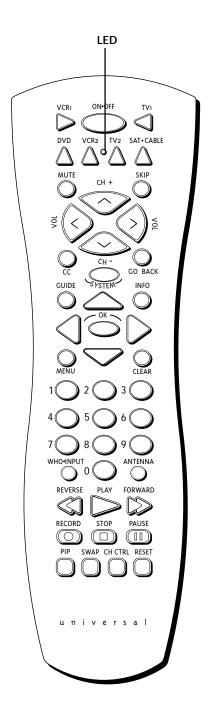

Some buttons on universal and basic remotes have different names, but the same function. A list of such buttons follows:

CRK17TC1 CRK76TK1

ON•OFF POWER WHO•INPUT INPUT

**Arrow Buttons and OK** Use the arrow buttons to highlight your choices and navigate within the menu system. Use the OK button to select your choice.

**MENU** Displays the basic Main menu. If you are already in the menu system, press OK or MENU to select a highlighted choice. When you are using the remote control to operate an RCA, GE, or PROSCAN VCR (and the remote is in VCR mode), the MENU button functions as a PROGRAM button.

**CLEAR** Clears menus and displays from the screen and returns you to normal viewing.

**Digit Buttons (0–9)** Selects a channel number or numbered menu option. Two digits must be pressed for each channel. Press 0 then 6 for channel 6. For three-digit channel numbers, press and hold 1 until "1--" appears on the screen. Then press the other two digits.

**WHO•INPUT** Selects among the possible input choices. See the "Using the Input Button" section later in this chapter for more information.

**ANTENNA** In VCR mode, functions as a TV/VCR input button.

**Transport Buttons (REVERSE, PLAY, FORWARD, RECORD, STOP, PAUSE)** When programmed, these buttons are used to control an auxiliary device, such as a VCR or laserdisc player. Some of these are also used when viewing the PC input.

**PIP** (Picture-In-Picture)\* Brings up the PIP (Picture-In-Picture) window. Press PIP again to remove the window. When *Alternate with PIP* has been selected in PIP Closed-Caption Display, the TV will display closed captioning in the PIP window at the second press of the PIP button.

**SWAP\*** Switches, or "swaps," the PIP window input with the main picture input.

CH CTRL (Channel Control)\* Lets you switch channel control between the PIP window and the main picture. To determine whether you are controlling the PIP window or the main picture, bring up the Status Display by pressing INFO. The yellow input display is the one you are controlling.

**RESET** Displays the Picture Presets choice list. See the description of the "Picture Quality Menu" section in the "Master Menus" chapter for more information.

Entering certain channel digits automatically selects specific inputs:

Channel	Input
126	VID
127	S-VID**
128	PC*

See the description of the PIP feature later in this manual for more information about using PIP\*.

<sup>\*</sup> The PIP, SWAP, CH CTRL, and PC Input functions are only available on models J27530, J32530, and J36530.

<sup>\*\*</sup> The S-Video input is not available on models J20541, J25420, or J20420.

#### USING THE INPUT BUTTON


In addition to a cable or antenna signal, you might have VCR, DVD, PC\*, Laserdisc, or other signals coming in to your TV (not all inputs are available on all models). Use the INPUT or WHO•INPUT button to select the desired signal source.

- 1. Make sure that the component you want to view is turned on. If you are using a remote control with component buttons (TV, VCR, etc.), press TV to place the remote in TV mode.
- 2. Press INPUT or WHO•INPUT until you have selected the desired input source.



The Status Display shows which input signal(s) is selected. The following table shows which display term usually corresponds with which input. See "Auto Tuning" under the "Channel Menu" section in the "Master Menus" chapter for more information on naming inputs.

Input Signal	TV Display
ANTENNA/CABLE jack	(channel digit)
A/V jacks	VID
S-VIDEO jack	SVID**
PC INPUT	PC*

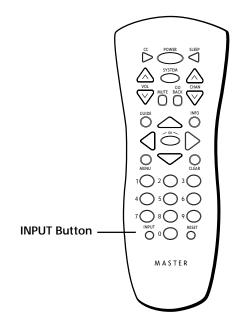


#### USING THE SYSTEM BUTTON

When the television is connected to an interactive system or similar device, the SYSTEM button allows you to access system programming or other special functionality through the DSCI jack (formerly called "Smartplug").

On a master or basic remote, the SYSTEM button can also allow independent remote control of two TVs. Once you have specified TV1 or TV2 status for the TVs (see the "Access and Power Options Menu" section in the "Master Menus" chapter), follow these steps to tell the remote which TV you want to operate:

- 1. On the remote control, simultaneously press and hold the SYSTEM button and 1 (for TV1) or 2 (for TV2).
- 2. After three seconds, release the buttons. The specified TV should now respond to that remote.
- 3. To control the other TV, simply repeat the process using the other (1 or 2) button.

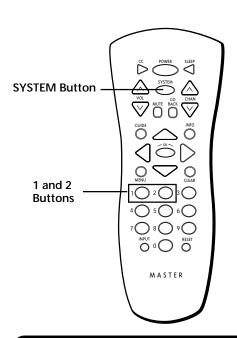

On a universal remote, just press TV1 or TV2 once you have specified TV1 or TV2 status for the TV (see the "Access and Power Options" section) to control two TVs independently.

<sup>\*</sup> The PC Input function is only available on models J27530, J32530, and J36530.

<sup>\*\*</sup> The S-Video input is not available on models J20541, J25420, or J20420.

#### UNIVERSAL REMOTE FEATURES

The CRK76TK1 remote can be programmed to control most brands of remote controllable components. The remote is already programmed to control most RCA, GE, and PROSCAN components; it may need to be programmed to control other manufacturers' components.

You do not have to program the remote to control two TVs; simply use the TV1 and TV2 buttons. See the "Access & Power Options Menu" section in the "Master Menus" chapter for more information.

#### **Testing the Universal Remote**

To determine whether the universal remote control needs to be programmed, turn a component on, such as a VCR, point the remote at the VCR, and press the VCR1 button. Then press ON•OFF or CH ^ v to see if the VCR responds to the remote commands. If not, the remote needs to be programmed.

#### **Programming the Universal Remote**

- 1. Turn on the component to be programmed.
- At the end of this chapter, look up the code list that corresponds to the component type and brand.
- On your remote control, press and hold the component button you want to program.
- 4. While holding the component button, enter one four-digit code from the code list.
- 5. Release the component button, and then press ON•OFF to see if the component responds to the remote control commands. If it doesn't, try pressing the component button and then ON•OFF again.
- 6. If you get no response, repeat these steps using the next code listed for your brand, until the component responds to the remote control. If it does respond, you are ready to control that component with your universal remote.


#### CONTROLLING COMPONENTS

Once the remote has been programmed successfully, you are ready to use it to control your components. To operate the component:

- Press the component button (TV1, VCR1, DVD, VCR2, TV2, or SAT•CABLE) to put the remote into that component's mode.
- 2. Press ON•OFF to turn the component on or off.
- 3. Use the remote buttons that apply to that component.

Note: If your remote is programmed to control a VCR, you only need to press the RECORD button to begin recording from video.

This remote control may not operate all models of all brands.

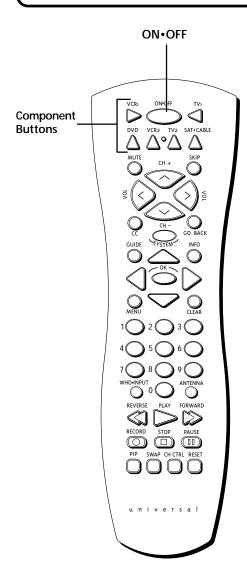

The RESET button on the universal remote functions the same as the Master remote RESET button.

#### Modes of Operation

Because the universal remote can control several different components (PC, VCR, cable box, etc.), it uses operational modes triggered by the component buttons. If you want the remote to control TV1, you must first press the TV1 button to put the remote into TV1 mode.

#### PIP (PICTURE-IN-PICTURE) OPERATION

The PIP feature is only available on models J27530, J32530, and J36530.

The PIP (Picture-In-Picture) feature lets you display a second, smaller picture on top of the main picture.

Your TV is equipped with a single tuner that can supply just one picture. The PIP feature requires a second video source (like a VCR, PC, or satellite receiver), to supply the second picture to the screen. The second video source must be connected to the TV through the video, S-Video, or PC INPUT jack. (The first source is usually connected through the CABLE/ANTENNA jack.)

Remember to also connect audio cables if necessary. See the connections on the next page or in the "Connections" chapter for examples of PIP-capable connections.

Any rating limits that are set will apply to both the PIP window and the main window.


#### USING THE PIP FEATURE


Although PIP can be used in different ways, this basic PIP scenario should get you started. While watching the TV, follow these steps to use your VCR to supply the picture for PIP:

- Press the PIP button on the universal remote. The PIP window appears on the screen, showing the same image as the main window.
- 2. Turn on the VCR (make sure it is properly connected).
- Press the TV button, then press CH CTRL until the PIP input display is selected (yellow).
- Press WHO•INPUT until you see the VCR signal (usually VID)
  displayed in the PIP input display. The PIP window should display the
  channel selected on the VCR.
- 5. To select the PIP window's channel, you need to select the channel on the VCR because that is the signal source for the PIP picture. Select the channels using the VCR front panel, VCR remote, or by pressing the VCR button on the remote to get into VCR mode, then use the remote to select channels. (This last method requires that the remote be programmed; see the instructions earlier in this chapter for more details.)
- 6. Use the CH CTRL button, the WHO•INPUT button, and the Arrow and SWAP buttons to adjust the two pictures.

Note that pressing SWAP switches the inputs for the two pictures. For example: if you begin with the PIP window showing the VCR image (VID), and press SWAP, you end up with the VCR image in the main window.

#### **Main Window**

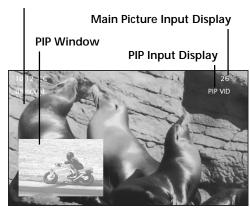

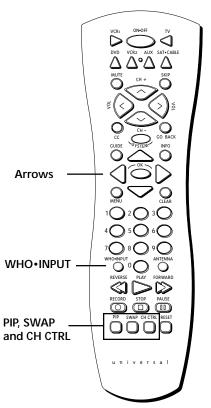


Refer to the description of the PIP, SWAP, WHO•INPUT and CH CTRL buttons, earlier in this chapter, for more information.

Press the INFO button to see the input displays and other on-screen information.

#### PIP Problems?

The PIP feature is only available on models J27530, J32530, and J36530.

You must have two video sources connected to your TV. You must also be tuned to one input source in the main window and a different input source in the PIP window for PIP to display two different images. PIP requires that a second video source, like a VCR, PC, or satellite receiver, be connected to the TV with a second connection (other than the primary cable or antenna connection). Two example connections are pictured below. See the "Connections" chapter for illustrations of other PIP-capable connections.

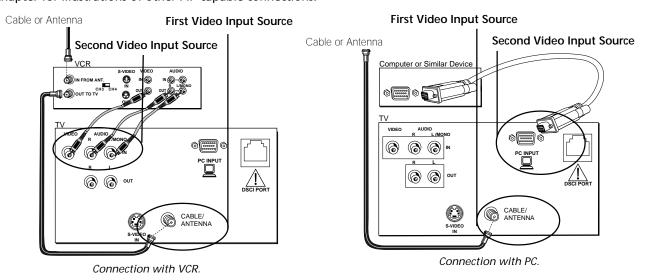

- Remote not responding Make sure the remote is in the right mode. Press the TV1 or TV2 button to put the remote
  into TV mode.
- **Bad reception** Most VCRs and satellite receivers have an antenna or TV/VCR button. If your cable or off-air antenna goes into your VCR or satellite receiver and then into your TV, try pressing the antenna or TV/VCR button on the front of the component.
  - Tip: If programmed to control your VCR, the ANTENNA button on the remote acts as a TV/VCR button in VCR mode.
- When I change channels, both windows change Make sure the input you want to change is active before trying to change it. (Use the WHO•INPUT button to see the input displays.)
  - Check the connections. If you use a cable box, you may need extra equipment. Contact you cable company for more information.
  - Make sure the two pictures are coming from different input sources (use the CH CTRL and WHO•INPUT buttons to change the input source).
  - See "The component button doesn't work," below, for more tips.
- Closed Captioning is in wrong window (main vs. PIP) Closed Captioning is set for the window (main or PIP), not the image source. When you swap, Closed Captioning will remain in the same window although the signals swap.
- The component button doesn't work Your remote may need to be programmed to control components (see description in the "Using the Remote" chapter).
  - If your remote is programmed, make sure that A/V signals are set to auto tune to the VID channel, S-Video signals are set to auto tune to the SVID channel, and PC signals are set to auto tune to the PC channel. Setting them to CH3 or CH4 may cause problems.
  - That component's switch may be set for the wrong channel. Check to make sure the input source setting matches the switch setting on the component (usually on the back panel).
- "Unusable Signal" message appears Tune the input component (VCR, Satellite Receiver, PC, etc.) to another channel. Make sure your connections are correct: OUT from component, IN to TV.

	VCRs
	. 2003, 2004, 2005, 2007, 2008, 2111,2112, 2113
	gh 202 <sup>-</sup>
	nics 2009, 2010
	2012, 202
	2014
	2013, 2014, 2015, 2016, 2017, 2018, 2019
CCE	2027, 206
	. 2013, 2014, 2015, 2016, 2017, 2018,2019,202
	200
	es
Cybernex	2013
	. 2015, 2017, 2019,2025, 2026, 2027, 2028, 2110
	2014, 2029
	c
	2015, 2021, 2024, 2025,2026,2029, 2030, 2032 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041
	, 2045, 2047, 2065, 2105, 2113, 2116, 2117, 2130
	. 2011, 2023, 2048, 2049, 2050, 2051, 2052,2118
	2021, 2119
Gradiente	2020
Harley David	son
Harman Karo	don
Hitachi	. 2002, 2055, 2056, 2057, 2107, 2111, 2120, 212
HI-Q	
	y 202
JCL	
Jensen	
JVC	2009, 2010, 2011, 2018, 2058, 2111, 2123
	. 2009, 2010, 2011, 2016, 2018, 2058, 2111,212
KLH	
171 - 1 -	0044 000
Lloyd	2002, 202
Lloyd Logik	
Lloyd Logik LXI Magnavox	
Lloyd Logik LXI Magnavox Magnin	
Lloyd Logik LXI Magnavox Magnin Marantz	
Lloyd Logik LXI Magnavox Magnin Marantz	
Lloyd Logik LXI Magnavox Magnin Marantz Marta	
Lloyd	
Lloyd	
Lloyd	2014, 202; 2002, 2020, 2020, 2021, 2022, 2062, 2063, 2104, 2108, 212; 2016, 2018, 2021, 2058, 2062, 2064, 2018, 2021, 2058, 2062, 2064, 2018, 2021, 2058, 2062, 2064, 2018, 2021, 2022, 2022, 2022, 2022, 2022, 2021, 2013, 2021, 2023, 2026, 2104, 213, 2020, 2021, 2031, 2031, 2021, 2021, 2022, 202
Lloyd	

MTC							2021	,2131
Multitech								
NEC		2058	2064	2009, 2076	2010, 2078	2011, 2079	2016, . 2111	2018, 2123
Nikko								
Noblex								2013
Olympus								2021
Optimus								
Optonica Orion								
Panasonic								
Pentax								
Pentex Resea	rch							2018
Philco								
Philips								
Pilot Pioneer								
Portland								
PROSCAN					2010,	2017,	2000.	2001
Protec								
Pulsar								
Quarter								
Quartz Quasar								
RCA				 2000	2001	2021, 2003	2022, 2013	2125 2021
	2088,	2089,	2090,	2091,	2107,	2115,	2120,	2125
Radioshack/Re	ealistic				2002,	2011,	2013,	2014
2021,								
Radix								
Randex Ricoh								
Runco								
Samsung								
Sanky								
Sansui					2010,	2092,	2111,	2123
Sanyo								
Scott 2012,								
Sears								
Sharp								
Shintom								
Shogun								2013
Signature							2002,	2013 2131
Signature Singer							2002, 2061,	2013 2131 2128
Signature Singer Sony			2002,	2004,	2098,	 2021, 2099,	2002, 2061, 2119,	2013 2131 2128 2128
Signature Singer Sony STS			2002,	2004,	2098,	2021, 2099,	2002, 2061, 2119, 2021.	2013 2131 2128 2128 2107
Signature Singer Sony STS Sylvania	2002,	2021,	2002,	2004,	2098,	2021, 2099, 2063,	2002, 2061, 2119, 2021, 2065,	2013 2131 2128 2128 2107 2124
Signature Singer Sony STS	2002,	2021,	2002,	2004,	2098,	2021, 2099, 2093,	2002, 2061, 2119, 2021, 2065, 2002,	2013 2131 2128 2128 2107 2124 2026
Signature Singer Sony STS Sylvania Symphonic Tandy Tashiko	2002,	2021,	2002,	2004,	2098,	2021, 2099, 2063,	2002, 2061, 2119, 2021, 2065, 2002, 2002,	2013 2131 2128 2128 2107 2124 2026 2011 2014
Signature Singer Sony STS Sylvania Symphonic Tandy Tashiko Tatung	2002,	2021,	2002,	2004,	2098,	2021, 2099, 2063,	2002, 2061, 2119, 2021, 2065, 2002, 2002,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111
Signature Singer Sony STS Sylvania Symphonic Tandy Tashiko Tatung TEAC	2002,	2021,	2002,	2004,	2098,	2021, 2099, 2063, 2063,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2058, 2085,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111 2111
Signature Singer Sony STS Sylvania Symphonic Tandy Tashiko Tatung TEAC Technics	2002,	2021,	2002,	2004,	2098,	2021, 2099, 2063, 2063,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2058, 2085, 2021,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111 2111 2109
Signature Singer Singer Sony STS Sylvania Symphonic Tandy Tashiko Tashiko TEAC TEAC Technics Teknika Teknika	2002,	2021,	2002,	2004,	2098, 2062, 2026, 2026,	2021, 2099, 2063, 2063, 2058,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2058, 2085, 2021, 2100,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111 2111 2109 2129
Signature Singer Sony STS Sylvania Symphonic Tandy Tashiko Tatung TEAC Technics	2002,	2021,	2002,	2004,	2098, 2062, 2026, 2021,	2021, 2099, 2063, 2063, 2058, 2026, 2013,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2058, 2085, 2021, 2100, 2024,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111 2111 2109 2129 2047
Signature Singer Sony STS Sylvania Symphonic Tandy Tashiko Tatung TEAC Technics Teknika TMK Toshiba ToteVision	2002,	2021,	2002, 2022, 2022, 2002, 2049,	2004, 2026, 2002, 2014, 2051,	2098, 2062, 2026, 2021, 2055,	2021, 2099, 2063, 2058, 2026, 2013, 2065,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2058, 2085, 2021, 2100, 2024, 2093, 2013,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111 2109 2129 2047 2116 2014
Signature Singer Sony Sony Sylvania Symphonic Tandy Tatung Tatung Technics Teknika TMK Toshiba ToteVision Unitech	2002,	2021,	2002,	2004, 2026, 2002, 2002, 2014,	2098, 2062, 2026, 2021, 2055,	2021, 2099, 2063, 2058, 2026, 2013, 2065,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2058, 2085, 2021, 2100, 2024, 2093, 2013,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111 2109 2129 2047 2116 2014 2013
Signature Singer Sony STS Sylvania Symphonic Tandy Tashiko Tatung TEAC Teknika Teknika Toshiba ToteVision Unitech Vector Reseai	2002,	2021,	2002,	2004, 2026, 2002, 2014, 2051,	2098, 2062, 2026, 2021, 2055,	2021, 2099, 2063, 2063, 2058, 2026, 2013, 2065,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2058, 2085, 2021, 2100, 2024, 2093, 2013,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111 2109 2129 2047 2116 2014 2013 2016
Signature Singer Sony STS Sylvania Symphonic Tandy Tashiko Tatung Teknika Teknika Toshiba ToteVision Unitech Vector Reseau	2002,	2021,	2002,	2004, 2026, 2002, 2002, 2014,	2098, 2062, 2026, 2021, 2055, 2009,	2021, 2099, 2063, 2058, 2026, 2013, 2065, 2010,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2058, 2085, 2021, 2100, 2024, 2093, 2013,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111 2109 2029 2047 2116 2014 2013 2016 2010
Signature Singer Sony Sony Sylvania Symphonic Tandy Tashiko Tashiko Teknika Teknika Tokniba ToteVision Unitech Vector Reseau Victor Video Concep	2002,	2021,	2002,	2004, 2026, 2002, 2014, 2051, 2009,	2098, 2062, 2026, 2021, 2055, 2009,	2021, 2099, 2063, 2058, 2026, 2013, 2010, 2015,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2088, 2081, 2013, 2013, 2013, 2015,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111 2111 2119 2027 2014 2014 2013 2016 2014 2013 2016 2011 2014 2011 2014 2011 2014 2015 2016 2017 2017 2018 2019 2019 2019 2019 2019 2019 2019 2019
Signature Singer Sony Sony Sylvania Symphonic Tandy Tashiko Tatung Technics Teknika TMK Toshiba ToteVision Unitech Vector Resear Video Conce	2002,	2021,	2002,	2004, 2026, 2002, 2014, 2051, 2009,	2098, 2062, 2026, 2021, 2055, 2009,	2021, 2099, 2063, 2058, 2026, 2013, 2015,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2058, 2085, 2021, 2100, 2024, 2013, 2015, 2015,	2013 2131 2128 2128 2107 2124 2026 2021 2011 2014 2111 2110 2129 2047 2116 2014 2014 2016 2016 2016 2017 2018 2018 2019 2019 2019 2019 2019 2019 2019 2019
Signature Singer Sony Sony Sylvania Symphonic Tandy Tashiko Tashiko Technics Teknika Teknika Toshiba ToteVision Unitech Vector Reseal Victor Video Concel Videosonic Video Sonic Vards 2055, 2056,	2002,	2021,	2002, 2022, 2022, 2002, 2049, 2014, 2101,	2004, 2026, 2002, 2014, 2051, 2009, 2015, 2102	2098, 2062, 2026, 2021, 2055, 2009, 2010, 2021, 2103,	2021, 2099, 2063, 2058, 2026, 2010, 2015, 2015, 2023, 2107,	2002, 2061, 2119, 2021, 2005, 2002, 2008, 2018, 2021, 2010, 2024, 2013, 2016, 2016, 2016, 2016, 2016, 2016, 2016, 2016,	2013 2131 2128 2128 2107 2014 2014 2111 2111 2111 2014 2013 2014 2013 2016 2010 2013 2013 2013 2013 2013 2013 2013
Signature Singer Sony STS Sylvania Symphonic Tandy Tashiko Tashiko Teknika Teknika Tokniba ToteVision Unitech Vector Reseau Victor Reseau Victor Reseau Victor Video Concet Videosonic Wackley Warship 2055, 2056, XR-1000	2002,	2021,	2002, 2022, 2022, 2002, 2049, 2014, 2101,	2004, 2026, 2002, 2014, 2051, 2009, 2015, 2102	2098, 2062, 2026, 2021, 2055, 2009, 2010, 2021, 2103,	2021, 2099, 2063, 2058, 2026, 2013, 2065, 2010, 2015, 2023, 2107, 2021,	2002, 2061, 2119, 2021, 2002, 2002, 2002, 2024, 2013, 2015, 2016, 2026, 2116, 2026,	2013 2131 2128 2128 2107 2014 2014 2011 2111 2109 2129 2047 2014 2013 2016 2010 2113 2029, 2131 2061
Signature Singer Sony Sylvania Symphonic Tandy Tashiko Tashiko Technics Technics Technics Teknika TMK Toshiba ToteVision Unitech Victor Video Concet Video	2002,	2021,	2002, 2022, 2022, 2002, 2004, 2014, 2101, 2009,	2004, 2026, 2002, 2014, 2051, 2009, 2102, 2010,	2098, 2062, 2026, 2021, 2055, 2009, 2010, 2011, 2103,	2021, 2099, 2063, 2058, 2026, 2010, 2015, 2012, 2021, 2021, 2021, 2021,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2015, 2016, 2016, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2027,	2013 2131 2128 2128 2126 2017 2124 2026 2011 2014 2111 2109 2129 2047 2116 2013 2016 2010 2113 2029, 2131 2029, 2131 2021
Signature Singer Sony STS Sylvania Symphonic Tandy Tashiko Tashiko Teknika Teknika Tokniba ToteVision Unitech Vector Reseau Victor Reseau Victor Reseau Victor Video Concet Videosonic Wackley Warship 2055, 2056, XR-1000	2002,	2021,	2002, 2022, 2022, 2002, 2004, 2014, 2101, 2009,	2004, 2026, 2002, 2014, 2051, 2009, 2102, 2010,	2098, 2062, 2026, 2021, 2055, 2009, 2010, 2021, 2103, 2011,	2021, 2099, 2063, 2058, 2026, 2010, 2015, 2012, 2021, 2021, 2021, 2021,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2015, 2016, 2016, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2027,	2013 2131 2128 2128 2126 2017 2124 2026 2011 2014 2111 2109 2129 2047 2116 2013 2016 2010 2113 2029, 2131 2029, 2131 2021
Signature Singer Sony Sylvania Symphonic Tandy Tashiko Tashiko Technics Technics Technics Teknika TMK Toshiba ToteVision Unitech Victor Video Concet Video	2002,	2021,	2002, 2022, 2022, 2002, 20049, 2014, 2101, 2009,	2004, 2026, 2002, 2014, 2051, 2009, 2102, 2010, 2004,	2098, 2062, 2026, 2021, 2055, 2009, 2010, 2021, 2103, 2011, 2098,	2021, 2099, 2063, 2058, 2026, 2010, 2015, 2012, 2021, 2021, 2021, 2021,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2015, 2016, 2016, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2027,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111 2109 2129 2047 2116 2010 2013 2013 2029, 2131 2021 2031 2041 2013 2029, 2131 2021 2031 2031 2031 2031 2031 2031
Signature Singer Sony Sylvania Symphonic Tandy Tashiko Tashiko Technics Technics Technics Teknika TMK Toshiba ToteVision Unitech Victor Video Concet Video	2002,	2021,	2002, 2022, 2022, 2002, 2004, 2014, 2101, 2009,	2004, 2026, 2002, 2014, 2051, 2009, 2102, 2010, 2004,	2098, 2062, 2026, 2021, 2055, 2009, 2010, 2021, 2103, 2011, 2098,	2021, 2099, 2063, 2058, 2026, 2010, 2015, 2012, 2021, 2021, 2021, 2021,	2002, 2061, 2119, 2021, 2065, 2002, 2002, 2015, 2016, 2016, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2027,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111 2109 2129 2047 2116 2010 2013 2013 2029, 2131 2021 2031 2041 2013 2029, 2131 2021 2031 2031 2031 2031 2031 2031
Signature Singer Sony Sony Sylvania Symphonic Tandy Tashiko Tashiko Technics Teknika Toshiba ToteVision Unitech Vector Reseav Victor Video Concev Video Concev Video Concev Video Concev Lossia 2055, 2056, XR-1000 Yamaha Zenith	2002, 	2021, 2021, 2015, 2015, Ca	2002, 2022, 2002, 2002, 20049, 2014, 2101, 2009,	2004, 2026, 2002, 2014, 2051, 2009, 2015, 2102, 2010, 2004,	2098, 2062, 2026, 2021, 2055, 2009, 2010, 2021, 2103, 2011, 2098,	2021, 2099, 2063, 2058, 2026, 2013, 2065, 2015, 2021, 2021, 2018, 2104,	20022, 2061, 2021, 2065, 2002, 2002, 2021, 2021, 2021, 2021, 2013, 2016, 2026, 2026, 2026, 2026, 2026, 2026, 2027, 2027, 2018,	2013 2131 2128 2128 2107 2124 2026 2011 2014 2111 2111 2119 2129 2047 2116 2010 2013 2016 2010 2113 2029, 2131 2012 2128
Signature Singer Sony Sony Sylvania Symphonic Tandy Tashiko Tashiko Technics Teknika Toshiba Totevision Unitech Vector Reseat Victor Video Concel Video Concel Video Concel Video Concel Video Concel Concel Video Concel C	2002, 	2021, 2021, 2015, 2013, 2096, Ca 5002,	2002, 2022, 2002, 2002, 2004, 2014, 2101, 2009, ble E 5003,	2004, 2026, 2002, 2014, 2051, 2009, 2015, 2102 2010, 2004, 80xes	2098, 2062, 2026, 2021, 2055, 2009, 2010, 2021, 2103, 2011, 2098, 5005,	2021, 2099, 2063, 2058, 2026, 2013, 2065, 2015, 2021, 2021, 2018, 2104,	20022, 2061, 20021, 2005, 2002, 2002, 2002, 2003, 2015, 2016, 2016, 2026, 2016, 2026, 2019	2013 2131 2128 2128 2107 2124 2026 2011 2011 2111 2111 2109 2047 2116 2010 2013 2016 2010 2113 2029, 2131 2012 2013 2016 2010 2113 2029 2017 2018 2019 2019 2019 2019 2019 2019 2019 2019
Signature Singer Sony Sony Sylvania Symphonic Tandy Tashiko Tashiko Technics Teknika Toshiba ToteVision Unitech Vector Reseav Victor Video Concev Video Concev Video Concev Video Concev Lossia 2055, 2056, XR-1000 Yamaha Zenith	2002, 	2021, 2015, 2015, 2016, Ca 5002,	2002, 2022, 2002, 2002, 20049, 2014, 2101, 2009, ble E	2004, 2026, 2002, 2014, 2051, 2009, 2010, 2010, 2004,	2098, 2062, 2026, 2021, 2055, 2009, 2010, 2011, 2098,	2021, 2099, 2063, 2058, 2026, 2010, 2015, 2021,	20022, 2061, 2021, 2065, 2002, 2008, 2085, 2021, 2016, 2016, 2016, 2026, 2018, 2019,	2013 2131 2128 2128 2107 2124 2026 2011 2011 2111 2111 2119 2027 2047 2116 2014 2013 2019 2010 2113 2029 2037 2047 2111 2111 2112 2016 2017 2018 2019 2019 2019 2019 2019 2019 2019 2019
Signature Singer Sony Sony Sylvania Symphonic Tandty Tashiko Tashiko Teknika Teknika ToteVision Unitech Video Conce Agranaha Zenith	2002, 	2021, 2015, 2015, Ca 5002,	2002, 2022, 2002, 2002, 20049, 2014, 2101, 2009, ble E	2004, 2026, 2002, 2014, 2051, 2009, 2015, 2102, 2010, 2004,	2098, 2062, 2026, 2021, 2055, 2009, 2010, 2011, 2098, 5005, 5008,	2021, 2099, 2063, 2058, 2026, 2010, 2015, 2010, 2011, 2021,	2002, 2001, 2002, 2005, 2002, 2008, 2001, 2100, 2013, 2014, 2016, 2016, 2026, 2024, 2024, 2019, 2011, 2016, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2026, 2027, 2026,	2013 2131 2138 2128 2107 2124 2026 2011 2111 2111 2109 2047 2116 2010 2113 2029, 2131 2029, 2131 2029 2131 2029 2047 2116 2010 2113 2029, 2131 2029, 2131 2029, 2131 2029, 2131 2031 2031 2031 2041 2051 2051 2051 2051 2051 2051 2051 205
Signature Singer Sony Sony Sylvania Symphonic Tandy Tashiko Tashiko Technics Teknika Teknika Toshiba ToteVision Unitech Vector Reseat Victor Video Concet Videosonic Wards 2055, 2056, XR-1000 Yamaha Zenith ABC Antronix Archer	2002, 	2021, 2021, 2015, 2015, 2096, Ca 5002,	2002, 2002, 2002, 2002, 2004, 2014, 2101, 2009, ble E	2004, 2026, 2002, 2014, 2051, 2009, 2015, 2102, 2010, 2004, 80xes	2098, 2062, 2026, 2021, 2055, 2009, 2010, 2021, 2103, 2011, 2098, 5005, 5008,	2021, 2099, 2063, 2058, 2026, 2013, 2065, 2015, 2021, 2018, 2104, 5006, 5009,	20022, 2061, 20021, 2065, 2002, 2002, 2021, 2015, 2016, 2016, 2026, 2016, 2026, 2019	2013 2131 2128 2128 2107 2124 2026 2011 2011 2011 2012 2013 2013 2013 2013

Citizen				5011
Contec				5016
	5003, 5005, 5007,5018, 5023,			
NSC		5002	5027.	5028
	5011, 5012, 5013, 5019,5025,			
Regency			0022,	5017
Scientific Atla	nta 5006,	5036	5014,	5034
Starquiet			3014,	5010
Tandy				5010
Talaviaw				501/
	3			
	5008,			
	5015,			
Zenin		JU26,	ວບວບ,	บบว I
	Satellite Receivers			
	•			
01			FOF /	F0F7

Satellite Receivers	
Chapparal	5056, 5057
Drake	5058, 5059
GE	5000
General Instruments	
Panasonic	5075
Primestar	5076
PROSCAN	5000
RCA	5000
Realistic	5063
Sony	5072
STS1	5064
STS2	5065
STS3	5066
STS4	5067
Toshiba	5068
Toshiba	
Uniden	5069

Audio	
(for RCA and Dimensia bi	
.IVI/FIVI	
hono	
D	
ape	4006
DVD Players	

CA, GE, PROSCAN	200

#### **AUDIO MENU**

Mute Switches audio muting on or off.

**Audio Levels** Displays the slider controls for adjusting the TV's Balance (Speaker In/Ext on model J20541), Treble, Bass, Initial Volume, and Maximum Volume.

In all models except the J20541, the Balance feature fades between left and right speakers. In the J20541, Speaker In/Ext fades between internal and external speakers. Treble and Bass adjust the proportion of high and low notes, respectively. Initial Volume sets the TV's volume to the specified level every time it is turned on. The Maximum Volume feature re-scales the volume control slider so that the far right position is always the maximum allowable volume (but not necessarily the maximum possible volume).

**Audio Processor** Controls the available audio modes, which control the way the sound comes through your speakers.




Models other than J20541 will feature these options under Audio Processor.


**Expanded Stereo\*** Electronically "widens" sound from stereo broadcasts, stereo VCRs, digital satellite systems, DVD players, and laserdisc players for a fuller, more spacious sound. This choice will not be present if *Fixed Output*, *Speakers Off* is selected from *Audio Output & Speakers*.

**Stereo\*** Splits the incoming stereo audio signal into left and right channels. Most TV programs and recorded materials have stereo audio. The TV displays the word STEREO when you tune to a program that is broadcast in stereo.

**Mono** Plays the sound in mono only (same signal sent to all speakers). Use this setting when receiving broadcasts with weak stereo signals.

**Second Audio Program (SAP)** Plays the program's audio in a second language, if one is available. The TV displays the word SAP when you tune to a program that is broadcast with SAP information. SAP audio is broadcast in mono. SAP is also used to broadcast a program's audio with descriptions of the video for the visually impaired.

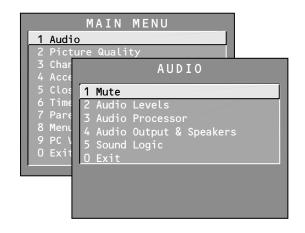

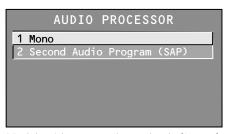


Models with monaural sound only (J20541) will only feature these options under Audio Processor.

<sup>\*</sup>This feature is not available on model J20541.

**Volume Hold** This menu item is available only on model J20541. Lets you turn Volume Hold on or off.

**Audio Output & Speakers\*** Lets you turn the TV's internal speakers on or off and set the audio outputs to fixed-level or variable control level.

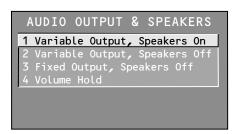


**Variable Output, Speakers On** Turns the TV's speakers on and sets the variable output from the TV's audio output jacks, proportional to the volume setting.

**Variable Output, Speakers Off** Turns the TV's speakers off and allows variable output from the TV's audio output jacks.

**Fixed Output, Speakers Off** Turns the TV's speakers off and allows fixed output from the TV's audio output jacks to an external device such as a surround sound amplifier. When this feature is turned on, the TV's volume control, tone controls, Expanded Stereo, and mute are disabled.

**Volume Hold** Turns the TV's speakers on and sets the audio outputs proportional to the current volume setting. When this feature is turned on, mute and other volume controls are disabled.

**Sound Logic** Turning this feature on reduces the annoying blasts in volume during commercial breaks to create more consistent audio output.

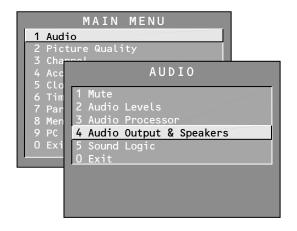


For information on connecting speakers to your television, see the "Connections" chapter.

<sup>\*</sup>This menu item is not available on model J20541.

#### PICTURE QUALITY MENU

The Picture Quality menu items allow you to adjust the appearance of on-screen images. Pressing RESET on the remote control returns all Picture Quality menu settings to their factory defaults.

**Picture Adjustments** Displays the five slider controls for adjusting the way the picture looks in the current video input source (this feature can be set differently for each video input source).

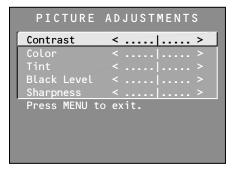

**Contrast** Adjusts the difference between the light and dark areas of the picture.

**Color** Adjusts the richness of the color.

Tint Adjusts the balance between the red and green levels.

Black Level Adjusts the brightness of the picture.

**Sharpness** Adjusts the crispness of edges in the picture.


When exiting the Picture Adjustments menu, the Save Custom Picture Preset choice list appears. You can choose either *Yes* or *No*. If you save the settings as a Custom Picture Preset, the TV will store the settings so that you can select them quickly if someone changes the settings.

**Picture Presets** Displays a choice list that lets you select one of four preset picture settings: Bright Lighting, Normal Lighting, Soft Lighting, or Custom Picture Preset. Custom Picture Preset is the default and will be selected if the RESET button is pressed while in this menu.

**Auto Color** Displays a choice list that lets you turn on the feature that automatically corrects the color of the picture. (This is especially useful for tracking realistic flesh tone colors as you switch from channel to channel.) Choose *Off* or *On*, depending on your preference.

**Color Warmth** Displays a choice list that lets you set one of three automatic color adjustments: Cool for a more blue palette of picture colors; Normal; and Warm for a more red palette of picture colors. The warm setting corresponds to the NTSC standard of 6500 K.

**Picture Tilt** Models J32530, J32430, and J36530 have extra-large picture tubes, which make them vulnerable to the effects of the Earth's magnetic field. You may need to adjust the picture tilt by using the left and right arrow buttons.

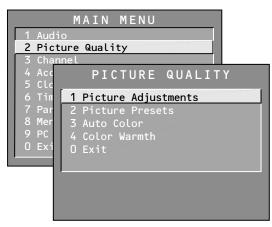


Models J32530, J32430 and J36530 will have a fifth option in the Picture Quality menu—Picture Tilt.

While watching TV, press the RESET button on a master remote to bring up the Picture Presets choice list. Point to the desired setting; press MENU or OK to select it.

#### CHANNEL MENU

**Channel Guide** Displays the list of channels and their labels (if labelled) in the active channel list.

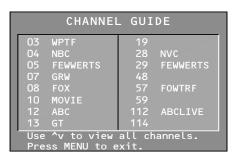

**Channel Selection** Allows the master user to set the initial channel and to select which of the three channel lists will be active (accessible to the basic user). If no initial channel is selected, the TV will select the last tuned channel when turned on. If *Hold* is selected, the user will not be able to select any channel other than the initial channel.

**Signal Source** Displays a choice list that lets you select the current signal source and turn muting and blanking on or off for weak signals.

**UHF/VHF** Choose this if you are currently using an off-air antenna for TV signals.

**Cable TV** Choose this if you are currently using cable or a cable box for TV signals.


**Auto Channel Search** Tells the TV to search automatically for all the channels available through the antenna input. When the TV finds an active channel, it places it in the selected channel list; inactive channels (weak stations or channels with no signal at all) will be removed from that channel list.

**List and Labels** Displays a control panel that lets you edit the three channel lists and choose an eight-character label for each channel. Follow the on-screen directions to customize channel lists and labels. Note that pressing RESET or SKIP in the Lists and Labels menu returns the highlighted field to its default status.

**Channel** Use the up and down arrows to scroll up and down through the channels available via your antenna. You can enter the channel number directly using the digit buttons.


**Lists A, B, and C** Use the up and down arrows to indicate whether you want the channel number to be included in the highlighted channel list. Channels included in a list will be available to users when that list is active. Channels not included in the active list will not be accessible to users.

**Channel Label** Use the up and down arrows to enter a label of up to eight characters for each channel. Hold an arrow button down to scroll quickly through the characters. Press RESET or SKIP to clear the currently highlighted label. To prevent a channel number from displaying on the screen, select "#" as the eighth label character.

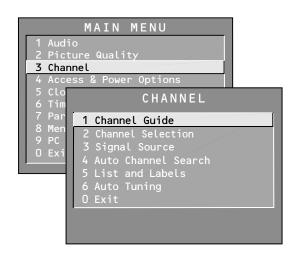

To deselect the initial channel, press the RESET button while in the Channel Selection screen.

When the muting and blanking feature is on and a weak signal is received, video will be replaced by a grey screen with the message "Unusable Signal" and audio will be muted.

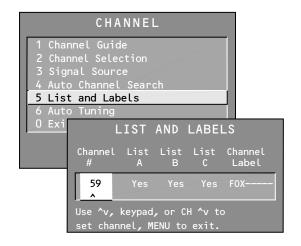

Note that the VID, SVID\*, and PC\*\* inputs must be added to this list manually. These inputs will not become accessible unless they are part of the active list.

**Auto Tuning** Displays a choice list that lets you set up the TV to automatically tune to the correct input channel when you press its component button (VCR1, DVD, VCR2, or SAT) on a universal remote. The Auto Tuning feature will work with RCA, GE and PROSCAN components; it may not work with all models of other brands.

#### Remember to press the TV button to put the TV back in TV mode.

The component button choices are:

**VCR1** Select the channel that the TV tunes to when you press the VCR1 button.

**VCR2** Select the channel that the TV tunes to when you press the VCR2 button.

**DVD** Select the channel that the TV tunes to when you press the DVD button.

**AUX** Select the channel that the TV tunes to when you press the AUX button.

**SAT** Select the channel that the TV tunes to when you press the SAT (or SAT•CABLE) button.

The input choices are (not all choices available on all models):

**Ch 3** Choose this if your component is only connected to the antenna jack on the back of the TV. Reminder: Make sure the component's Ch 3/4 switch is set to channel 3.


**Ch 4** Choose this if your component is only connected to the antenna jack on the back of the TV. Reminder: Make sure the component's Ch 3/4 switch is set to channel 4.

**VID** Choose this if your component is connected to the Audio/Video IN jacks on the back of the TV. The TV will tune to the VID input when you press the specified component button.


**SVID\*** Choose this if your component is connected to the S-VIDEO jack on the back of the TV. The TV will tune to the SVID input when you press the specified component button. Reminder: Make sure to also connect audio cables to get sound when using S-Video.

S-VHS, or Super-VHS, is an extended format of VHS and improves the picture quality of the signal passing through the S-VIDEO input.

**PC\*\*** Choose this if your component is connected to the PC INPUT jack on the back of the TV. The TV will tune to the PC input when you press the specified component button.

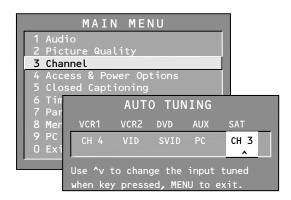

If a component button has not been programmed, its input will appear as "----."

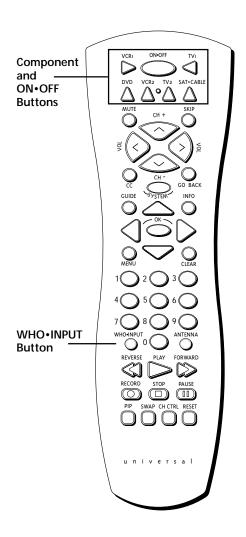

Remember that you can also press the WHO•INPUT or INPUT button on the remote to switch between the input

remote t signals.

<sup>\*</sup> The S-Video input is not available on models J20541, J25420, or J20420.


<sup>\*\*</sup> The PC input is only available on models J27530, J32530, and J36530.

#### **ACCESS & POWER OPTIONS MENU**

This control panel allows the master user to specify which features and functions basic users will be able to access. Yellow and green color coding shows each item's status:

- Yellow default setting
- · Green change from default setting

**Remote Configuration** This feature tells the TV under what circumstances to respond to remote control commands

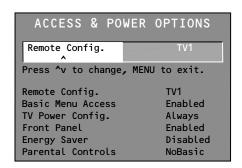

**TV1** This TV will only respond to a remote in TV1 mode.

**TV1 or TV2** This TV will respond if the remote is in either mode.

**TV2** This TV will only respond to a remote in TV2 mode.


**Disabled** This TV will not respond to a remote at all, except MENU from the master remote.

Once you have assigned TV1 or TV2 status to your TVs, you will need to tell the remote control which TV you want to operate. On a master or basic remote:

- 1. Point the remote at TV1.
- 2. Simultaneously press and hold the SYSTEM and 1 buttons.
- 3. After three seconds, release the buttons. TV1 should now respond to the remote.
- 4. To control TV2, simply repeat the process using the SYSTEM and 2 buttons.


On a universal remote:

- 1. Point the remote at TV1.
- 2. Press the TV1 button to put the remote in TV1 mode.
- To control TV2, simply repeat the process using the TV2 button and TV2.

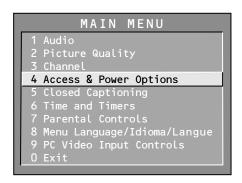


# Navigating in Access & Power Options

In the Item selection area, use the ^v buttons to scroll to the item you want to set. Use the > button to highlight the Setting selection area, then use the ^v buttons to change the setting. The changes you make will be reflected in the lower portion of the screen.

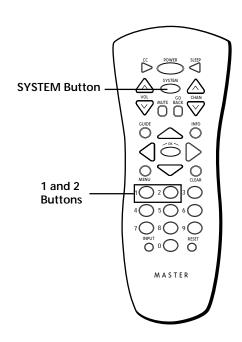

**Basic Menu Access** This feature tells the TV to either enable or disable the basic menu. When the basic menu is disabled, users cannot access menus through the basic remote or the front panel.

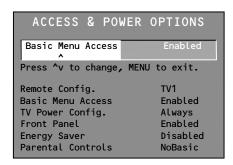


**TV Power Configuration** This feature determines whether the TV can be turned on and off with the POWER button on the remote or the front panel. You can toggle between:


**Switched** The TV can be turned on or off; the Energy Saver can be enabled.


**Always** The TV cannot be turned on or off; all Energy Saver settings will be ignored.

**Front Panel** This feature determines whether the front panel buttons will be active (able to be used to control the TV) or not.

**Energy Saver Setting** When enabled, this feature will turn the TV off after a specified period of disuse (no remote or front panel button presses). You can toggle between disabled, 2-hour, 1-hour, and 30-minute settings. When disabled, the TV will not turn off automatically. If *TV Power Config.* is set to *Always*, Energy Saver Settings will be ignored.

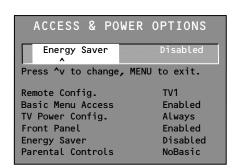

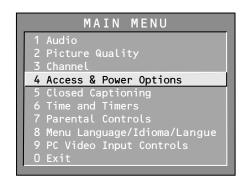

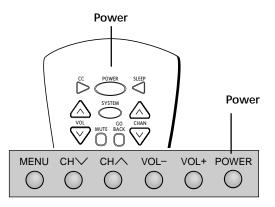


Pressing MENU on a master remote will allow access to the TV's menu settings unless blocked by clone programming.

**Parental Controls** This feature determines the amount of access basic users have to Parental Controls. You can toggle between:

**Basic&Pwd** Basic users are able to enter the Parental Control menu and change the password. Basic users can watch blocked programming by entering the system password.


**Basic** Basic users are able to enter the Parental Control menu but cannot change the password. Basic users can watch blocked programming by entering the system password.

**NoBasic** Parental Control does not appear on the basic Main menu. Basic users can watch blocked programming by entering the system password.

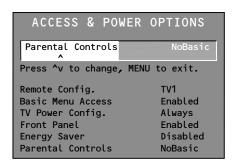

If Parental Controls is set to *NoBasic*, Movie Rating Access, TV Rating Access, Unrated Program Block, and Channel Block will not be available to basic users, regardless of what those items have been set to individually in the Parental Controls menu (described later in this chapter).

Note that the master user is always able to enter Parental Controls and change the password.

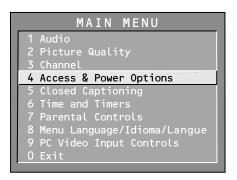

Pressing RESET on the remote will set the highlighted item to its default setting.

Yellow and green color coding shows each item's status:

- Yellow default setting
- **Green** change from the default setting

#### CLOSED CAPTIONING MENU

Many programs are encoded with closed captioning information, which lets you display the audio portion of a program as text on the TV screen. Closed-Caption Display allows you to choose when closed-captioning is displayed. Closed-Caption Modes allow you to choose how closed captioning is displayed.

Closed captioning is not available on all channels at all times. It only appears on specific programs encoded with closed captioning information. When a program is closed captioned, the letters "CC" are displayed in the Status Display. See the "Reference" chapter for more information about the Status Display.


# Closed-Caption Display and PIP\* Closed-Caption Display

The Closed-Caption Display and PIP\* Closed-Caption Display let you choose when you want to have Closed Captioning on. In the PIP Closed-Caption Display, selecting the *Alternate with PIP button* choice results in the following sequence when the PIP button is pressed: PIP without closed captioning, PIP with closed captioning, no PIP.

#### Closed-Caption Mode and PIP\* Closed-Caption Mode


Your TV offers eight closed-captioned modes, including four text modes. To set the Closed-Captioning Mode for the main screen or PIP\* window:

- 1. Select Closed Captioning from the Main menu.
- 2. Highlight *Closed-Caption Mode* or *PIP\* Closed-Caption Mode* and press OK. A choice list will appear:

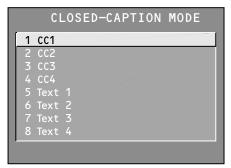

The PIP\* Closed-Caption Mode screen looks very similar to the Closed-Caption Mode screen above, except CC1 and CC3 are the only accessible options.

3. Point to your choice and press OK to select it and return to the Closed Captioning menu.

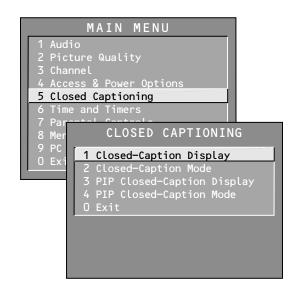

Note that when one of the text modes is selected, Closed Captioning leaves a black box on the screen at all times, even when no closed captioning information is being transmitted.

If you don't know which Closed-Caption Mode to use, select CC1. CC1 is probably the mode that is used in your area. CC2, CC3, and CC4 are reserved for foreign languages, and are rarely used at this time.


<sup>\*</sup> PIP is a feature of models J27530, J32530, and J36530 only and can only be accessed with a universal remote.

#### TIME AND TIMERS MENU


**Current Time** Enter the current time. The on-screen directions guide you through the steps needed to set the time. This feature is accessible by basic users only if *Time Configuration* is set to *Basic* (unless an invalid time is received).

**Sleep Timer** Select the amount of time you want to give the TV before it shuts itself off (up to four hours). One minute before the scheduled shutoff, a warning will appear on the screen to let you know the Sleep Timer's status. When this message is displayed, any remote or front panel button press will turn the Sleep Timer off.


The Sleep Timer can also be accessed directly using the SLEEP button on the remote.

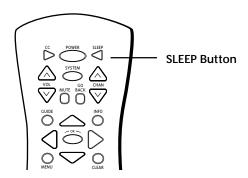

**Schedule** Set up a schedule for turning the TV on and off automatically. The on-screen directions guide you through the steps needed to set the schedule. (If the current time has not been set, you will be required to set it.)




Note that pressing the RESET button while in the Schedule control panel clears both the start and stop times and selects *Inactive* in the *Schedule Status* field.

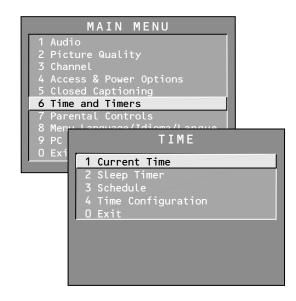

Note that if *TV Power Config.* is set to *Always* in Access & Power Options, Sleep Timer and Schedule will not turn the TV off.

**Time Configuration** This control panel lets you control several time-related functions. Scroll to the feature you want to set in the *Item* field. Then, highlight the Setting field and scroll to select the setting you want for that item. Your choice should be reflected in the table at the bottom of the control panel.

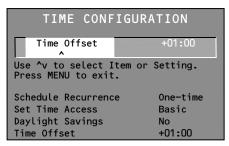

Use the arrow and OK or MENU buttons on the remote to highlight and select your choices.

**Schedule Recurrence** Select what sort of access you want users to have to the scheduling function:

**Disabled** Prevents the basic user from viewing or changing the Schedule menu item.

**Recurring** This schedule will be in effect indefinitely; both the master and basic user can view and change the Schedule menu item.

**One-time** This schedule will only be active once unless reset; both the master and basic user can view and change the Schedule menu item.

**Set Time Access** Select who is able to change the current time:


**Disabled** Prevents the basic user from viewing or changing the Current Time menu item unless an invalid time is received. The basic user will still be able to view the current time in the Status Display if a time has been set.

**Automatic** Sets the time automatically using a time-set channel. Basic users can view the Current Time menu item, but cannot change it.

**Basic** Both the master and basic user can view and change the Current Time menu item.

**Daylight Savings** When on, the TV automatically adjusts for daylight savings time.

**Time Offset** Set an offset (from +12 to -12 hours) from Universal Time (UTC). See the note at right for more information.

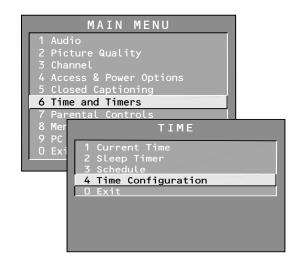

Yellow and green color coding shows each item's status:

- Yellow default setting
- Green change from the default setting

#### Common U.S. offsets from UTC:

Eastern -5:00
Central -6:00
Mountain -7:00
Pacific -8:00
Alaska -9:00
Hawai`i -10:00

#### PARENTAL CONTROLS MENU

The Parental Controls menu allows you to program your TV so that children cannot see certain programs, channels, or use the front panel controls. The choices in the Parental Controls menu involve software inside your TV (V-Chip) which allows you to block TV programs and movies containing violence, sex, or other content. Programs can be unblocked by entering a password.

The software inside your TV comes turned "off," so if you choose not to implement it, you can just ignore it. Note however, that in the default state, basic users have no access to Parental Controls.

When turned "on," the software reads a code that most broadcasters send with programs. That code tells the software the program's age-based rating (TV-MA, TV-14, etc.) and content themes (Violence (V), Adult Language (L), etc.).

If you have blocked the rating or content themes that the program contains, you will receive the message, "This channel is not approved for viewing." Broadcasters are not required to provide content themes, so programs received with no content themes will only be blocked if you block their age-based rating. You can also block movies that have been given a rating of "Not Rated," and programs that are considered "unrated" because no code has been sent by the broadcaster.

#### LOCKED/UNLOCKED

Selecting this option lets you lock and unlock Parental Controls settings using a password. Follow the on-screen instructions to lock or unlock blocked programming (the default password is 5625).

If you do not lock Parental Controls, none of the settings for V-Chip, Channel Block, or Front Panel Block will take effect.

Master users can enter a new password at any time through the *Password* menu option.

#### PARENTAL CONTROLS ACCESS


You can choose which of the following Parental Controls menu items basic users have access to (*Setting* toggles between *Basic* and *NoBasic*):


**Movie Rating Access** This feature determines whether the Movie Rating Limit screen is accessible through the basic menus.


**TV Rating Access** This feature determines whether the TV Rating Limit screen is accessible through the basic menus.

**Unrated Prog. Block** This feature determines whether the Unrated Program Block feature is accessible through the basic menus.

**Channel Block** This feature determines whether the Channel Block feature is accessible through the basic menus.

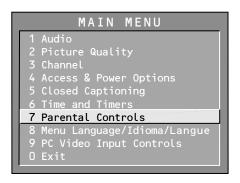

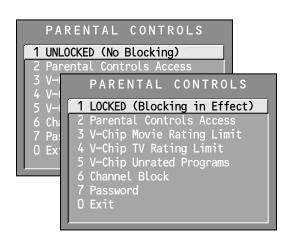

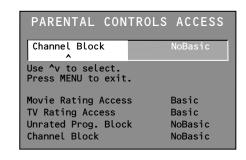

#### V-CHIP MOVIE RATING LIMIT

You set movie rating limits by blocking movies rated above a specified level. To access the V-Chip Movie Rating Limit menu:

- 1. Press MENU on the remote control.
- 2. Select Parental Controls.
- 3. Select V-Chip Movie Rating Limit.

#### **Blocking Movie Ratings**

If you only want your child to watch movies that have a PG or lower rating (in other words, movies rated PG and G), you can automatically block all movies with higher ratings by doing the following:

- Highlight the Rating field and press the up and down arrows to find the rating that is the lowest rating you do not want the child to watch. (In the example above, you would point to the rating status button corresponding to PG-13, since the highest rating you want the child to watch is PG.)
- 2. Use the right arrow to highlight the Rating Status field. Press the up and down arrows to toggle between *View* and *Block*. All higher ratings' *View* buttons will automatically change to *Block*.
- 3. Press OK to return to the menu or exit the screen.
- If Parental Controls are not locked, you must lock them so the movie rating limits will take effect. See "Locking Parental Controls," later in this chapter.


#### **Viewing Movie Ratings**


After you block movie ratings, you have the option of changing some of the Rating Status fields back to *View*:

- 1. Highlight the Rating field and press the up and down arrows to find the rating you want to view.
- 2. Use the right arrow to highlight the Rating Status field. Press the up and down arrows to change the button from *Block* to *View*.


For example, if movies with a rating of PG-13 and higher are blocked, you can change the rating status for NC-17 back to *View*. Your child would then be able to watch all movies with a G, PG, or NC-17 rating.

Press MENU or OK to exit the screen, and be sure parental controls are locked (see "Locking Parental Controls," later in this chapter).

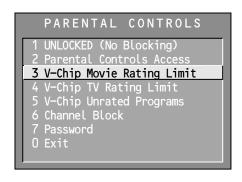

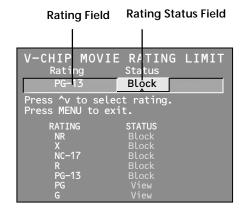



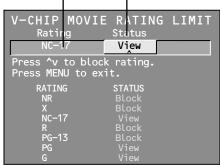

Some movies may be given a Not Rated (NR) rating. After blocking movie ratings, you must set NR to *View* separately to view NR movies.

#### V-CHIP TV RATING LIMIT

The V-Chip TV Rating Limit lets you decide what TV programs can and cannot be viewed.

To set TV programming limits:

- Choose Parental Controls from the Main menu. If Parental Controls have previously been locked, you must enter your password. If they are not locked, you will get a message reminding you that your limits will not be effective until you lock Parental Controls.
- 2. Press MENU to continue.
- 3. Highlight and select V-Chip TV Rating Limit.
- 4. Once you get to the V-Chip TV Rating Limit screen, use the arrows and OK on your remote to change the status of a TV program rating or content theme from *View (V)* to *Block (B)*.


The following chapters provide more details about how to change the status of TV program limits.

#### The TV Rating Limit Screen

Below is an example of where items are located within the TV Rating Limit screen.

#### Rating Field

Lets you select from a list of age-based ratings you can block or view.

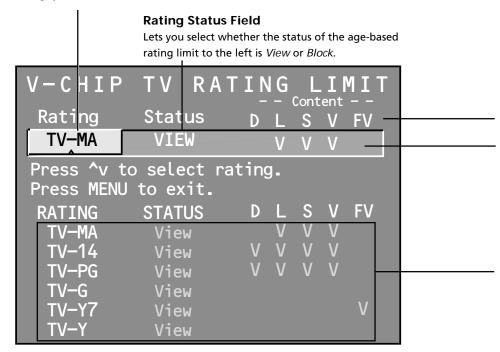

# PARENTAL CONTROLS 1 UNLOCKED (No Blocking) 2 Parental Controls Access 3 V-Chip Movie Rating Limit 4 V-Chip TV Rating Limit 5 V-Chip Unrated Programs 6 Channel Block 7 Password 0 Exit

#### **Content Themes**

Lists the content themes you can block or view.

#### **Content Status Fields**

Lets you select which content themes to View (*V*) or Block (*B*) for the selected rating.

#### **Rating Settings Area**

Lets you see the current Block/View state of age-based ratings and associated content.

#### **TV AGE-BASED RATINGS**

The TV age-based ratings and content themes you can block are listed in the table below.

Age-Based Rating	Description and Content Themes for Age-Based Ratings
TV-MA	Mature Audience Only. Specifically designed to be viewed by adults and may be unsuitable for children under 17. It contains one or more of the following content themes: crude indecent language (L), explicit sexual activity (S), or graphic violence (V).
TV-14	Parents Strongly Cautioned. Contains some material that many parents would find unsuitable for children under 14. Parents are strongly urged to exercise greater care in monitoring this program and are cautioned against letting children under the age of 14 watch unattended. This program contains one or more of the following content themes: intensely suggestive dialogue (D), strong coarse language (L), intense sexual situations (S), or intense violence (V).
TV-PG	Parental Guidance Suggested. Contains material that parents may find unsuitable for younger children. Many parents may want to watch it with their younger children. The program contains one or more of the following content themes: some suggestive dialogue (D), infrequent coarse language (L), some sexual situations (S), or moderate violence (V).
TV-G	General Audience. Most parents would find this program suitable for all ages. It contains little or no sexual dialogue (D) or situations (S), no strong language (L), and little or no violence (V).
TV-Y7	Directed to Children 7 years and older. Designed for children ages 7 and above. It may be more appropriate for children who have acquired the developmental skills needed to distinguish between make-believe and reality. Themes and elements in this program may include mild <b>fantasy violence (FV)</b> or comedic violence, or may frighten children under the age of 7.
TV-Y	All Children. Themes and elements in this program are designed for a young audience, including children from ages 2-6. It is not expected to frighten younger children.


# PARENTAL CONTROLS 1 UNLOCKED (No Blocking) 2 Parental Controls Access 3 V-Chip Movie Rating Limit 4 V-Chip TV Rating Limit 5 V-Chip Unrated Programs 6 Channel Block 7 Password 0 Exit

#### **Blocking Age-Based Ratings**

You can automatically block all program ratings above a specified age-based rating level. For example, if you only want your child to watch programs that have a TV-G rating and lower (in other words, you want the child to watch TV-G, TV-Y7, and TV-Y), then you need to block all programming with higher ratings.

To block programs with higher ratings:

- Determine the lowest level rating you do not want the child to watch.
- 2. Use the left and right arrows to highlight the Rating field.
- Use the up and down arrows on the remote to scroll through the age-based rating limits. Keep scrolling until the rating corresponding with the lowest rating you do not want the child to watch appears.
  - In the example discussed above, you would scroll through the choices in the Rating field until TV-PG appears, since the highest rating you want the child to watch is TV-G.
- 4. Use the right arrow to move the yellow highlight to the Rating Status field.
- Press the up or down arrow to toggle between View and Block. The status for the rating listed to the left and all higher ratings automatically changes to Block (B).

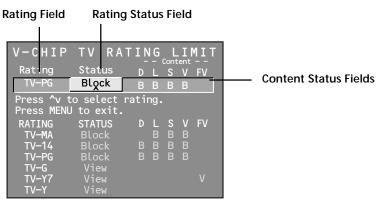

- Press MENU or OK on the remote to return to the menu or exit the screen when you are finished.
- 7. Select Lock Parental Controls from the Parental Controls menu. Enter a password, and if you have not already set your password, you will be prompted to enter it again to confirm.

# PARENTAL CONTROLS 1 UNLOCKED (No Blocking) 2 Parental Controls Access 3 V-Chip Movie Rating Limit 4 V-Chip TV Rating Limit 5 V-Chip Unrated Programs 6 Channel Block 7 Password 0 Exit


Hierarchy of Age-Based Ratings	
TV-MA	Mature Audience Only
TV-14	Parents Strongly Cautioned
TV-PG	Parental Guidance Suggested
TV-G	General Audience
TV-Y7	Directed to Children 7 Years and Older
TV-Y	All Children

When you change the status of a rating to *Block*, the system will automatically block higher ratings and all corresponding content themes.


#### **Viewing Age-Based Ratings**

After you block age-based ratings, you have the option of changing some of the ratings back to *View*.

- 1. Determine which blocked rating you want to view.
- 2. Use the left and right arrows to highlight the Rating field.
- Use the up and down arrows to select the rating whose status is *Block*.
- 4. Press the right arrow to move the yellow highlight to the rating status field.
- Press the up or down arrows to toggle between View and Block.
   Rating Status Field

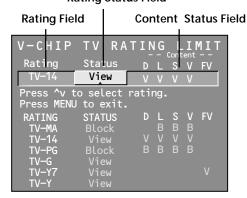

Note that the content status fields corresponding to the unblocked rating become *View* as well. Lower-level ratings and content do not change.

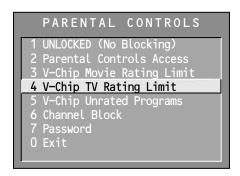

You must remember to lock Parental Controls for rating limits to take effect.

Pressing RESET (on the master remote) or SKIP (on a basic remote) will reset all ratings to *View* and *V*.


#### **Blocking Specific Content Themes**

You can block programs based on their content. (Content is represented by the *D*, *L*, *S*, *V*, and *FV* on your screen. See the beginning of this chapter for details.) When you block a content theme for a particular rating, you automatically block that content theme for higher rated programs as well.

For example, if you do not want your child to watch programs that have adult language (L) rated TV-PG or higher, then you could block all programming TV-PG and above containing adult language.

#### To block program content:

- Determine the lowest level of content you do not want the child to watch.
- 2. Use the left and right arrows on the remote control to highlight the Rating Field.
- 3. Use the up and down arrows on the remote to scroll through the age-based ratings until the rating that corresponds with the lowest content you do not want the child to watch appears. (In the example above, you would scroll through the ratings until the TV-PG rating appeared.)
- 4. Press the right arrow to move the highlight to the Field corresponding with the content theme you wish to block out.
- Press the up or down arrow to change content status from V to B.
   All higher ratings' content theme will automatically change to B.

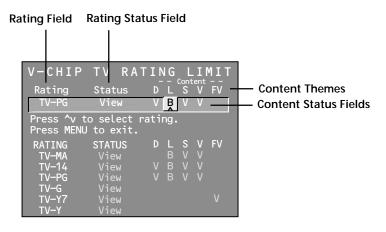

6. Press MENU or OK to return to the menu or exit the screen.

# PARENTAL CONTROLS 1 UNLOCKED (No Blocking) 2 Parental Controls Access 3 V-Chip Movie Rating Limit 4 V-Chip TV Rating Limit 5 V-Chip Unrated Programs 6 Channel Block 7 Password 0 Exit


Content Themes	
D	Sexually Explicit Dialogue
L	Adult Language
S	Sexual Situations
V	Violence
FV	Fantasy Violence

Broadcasters are not required to provide content themes or age-based ratings. Programs received with no content themes will only be blocked if you block their age-based rating.


#### **Viewing Specific Content Themes**

If you block specific Content Themes, you have the option of going back and changing some of the Content Themes back to *View* (*V*):

- 1. Determine the content themes you want to change to View (V).
- Use the left and right arrows on the remote control to highlight the Rating field.
- 3. Use the up and down arrows on the remote to scroll through the age-based ratings until the rating whose content theme you want to change to *View* appears.
- Press the right arrow to move the yellow highlight to a particular content theme status, such as the B under language (L) corresponding with TV-14.
- Press the up or down arrows to change its status back to V. Your child would then be able to watch programs with TV-14 adult language content, but not programs with TV-PG or TV-MA language content.

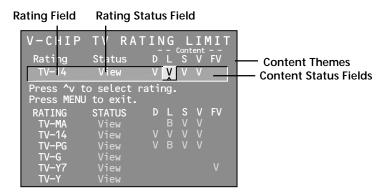

Note that only the content theme status corresponding to TV-14 language (L) changes to *View* (V). Higher rated content themes, such as that for TV-MA language, do not change.

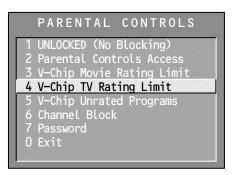


Pressing RESET or SKIP on the remote will reset all ratings to *View* and *V*.

You must remember to lock Parental Controls for rating limits to take effect.

#### V-CHIP UNRATED PROGRAMS

Selecting this option lets you decide if programs that the V-Chip recognizes as "unrated" can be viewed. Note that "unrated" TV programs may include news, sports, political, religious, local and weather programs, emergency bulletins, and public announcements. Also, the first few seconds of a rated program may be blocked due to a brief delay in the transmission of the rating.

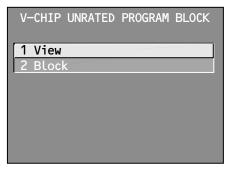

**View** All unrated programs are available. **Block** No unrated programs are available.

# PARENTAL CONTROLS 1 UNLOCKED (No Blocking) 2 Parental Controls Access 3 V-Chip Movie Rating Limit 4 V-Chip TV Rating Limit 5 V-Chip Unrated Programs 6 Channel Block 7 Password 0 Exit

Don't forget to lock Parental Controls after you change the status of Parental Control settings. If you do not, the limit will not take effect.

#### **CHANNEL BLOCK**

Selecting this option lets you decide what channels can be viewed.

View Makes the selected channel viewable.

**Block** The front panel and remote control CH ^v (channel up and down) buttons will tune only to channels that you have marked as *View*. The remote will still tune to the blocked channel if you use the digit buttons to access the channel, but the audio will be muted and the video will be replaced with the Channel Block Warning Display:

This channel has not been approved for viewing.

Change channel or press SELECT/OK to enter password and temporarily deactivate Parental Controls.

Don't forget to lock Parental Controls after you change the status of Channel Block. If you do not, the Channel Block will not take effect.

# PARENTAL CONTROLS 1 UNLOCKED (No Blocking) 2 Parental Controls Access 3 V-Chip Movie Rating Limit 4 V-Chip TV Rating Limit 5 V-Chip Unrated Programs 6 Channel Block 7 Password 0 Exit

#### **PASSWORD**


Selecting this option lets you specify a Parental Controls password (the default password is 5625 —spells "lock" on a telephone-style keypad). Master users can enter a new password without being prompted for the old one. Basic users must enter the old password before they can create a new one.




After you enter a new password, the system is automatically locked.


#### **MENU LANGUAGE**

The Menu Language selection affects only the menus. It does not change the audio language. The menu language choices are: *English*, *Spanish* or *French*.



Choosing a menu language is not the same as choosing a Second Audio Program (SAP). See the "Audio Menu" section at the beginning of this chapter for more information.

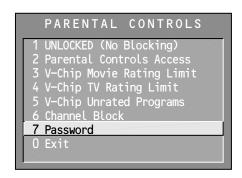

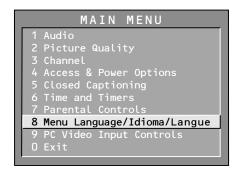


#### PC VIDEO INPUT CONTROLS

This feature is only available on models J27530, J32530, and J36530.

Follow the steps below to set up and use the PC Video Input Controls, or refer to the next pages for quick reference.

1. Make sure your TV is connected to a PC or similar component and that the component is turned on.

Computer or similar device

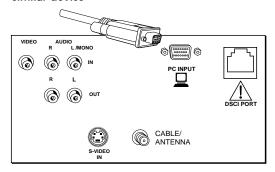


This monitor accepts signals with a resolution of up to 2048 x 1536 @ 152 hertz vertical refresh rate.

- 2. Make sure the PC input has been added to the desired channel list (in the Main menu, choose *Channel*, *List and Labels*).
- 3. Make sure the desired channel list is active (in the Main menu, choose *Channel, Channel Selection*).
- 4. Select the PC input. There are four ways to do this:
  - Use the CH +/- buttons until "PC" appears on the screen
  - Press the WHO•INPUT button until "PC" appears on the screen
  - Auto tune with the remote (see the "Using the Remote" chapter) until "PC" appears on the screen
  - Select channel 128

The image from the PC should now appear on the screen. Step 5 and the rest of this section provide information on using the remote with the PC input.

5. Select PC Video Input Controls from the Main menu. The screen below appears and explains how to use the remote control when the PC input is selected. The functionality of these controls is explained on the next page; there is also a Quick Reference at the end of this chapter.

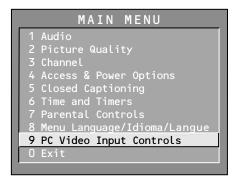

Most computer video signals operate at speeds substantially higher than those of television signals. Because of this, when a computer video signal is converted for display on a television, some reduction in clarity from the original image is to be expected.

```
PC VIDEO INPUT CONTROLS

Pan Pan Pan Pan
^Up vDown > Right < Left

OK Zoom

<<(REW) Video settings (FF)>>
PAUSE Freeze toggle
RESET Default settings

Press the desired remote key to control image. MENU to exit.
```

#### USING THE PC VIDEO INPUT CONTROLS

#### Zooming

You may want to enlarge or reduce the on-screen image by zooming. The OK button allows you to toggle the following zoom options:

- 1x displays the image at full size
- 2x displays the image at twice its full size

#### **Panning**

When "zoomed in" to 2x, the viewable image will be larger than can be shown on the screen at one time. Panning with the Arrow buttons allows you to view different portions of these enlarged images. Pan up to view portions of the image currently above the screen, pan left to view portions of the image currently to the left of the screen, and so on.

#### Freezing and Unfreezing


This functions like a "Pause" button with a VCR. The word "Freeze" will be displayed on the screen until this function is deactivated.

#### **Using Video Settings**

Video settings are changed by pressing the FORWARD or REVERSE buttons, which simply scroll through the four presets in different orders.

#### Resetting

Pressing RESET simply resets zooming, panning, freezing, and video settings to their defaults. See the Quick Reference that follows for details.

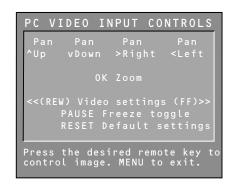


# PC VIDEO INPUT CONTROLS Pan Pan Pan Pan ^Up vDown > Right < Left OK Zoom <<(REW) Video settings (FF)>> PAUSE Freeze toggle RESET Default settings Press the desired remote key to control image. MENU to exit.

#### **PC Video Input Controls Quick Reference**

Arrow Up Pan picture up
Arrow Down Pan picture down
Arrow Left Pan picture left
Arrow Right Pan picture right
OK Zoom states (1x, 2x)
FORWARD Video settings (1, 2, 3, 4)
REVERSE Video settings (4, 3, 2,1)
PAUSE Freeze toggle (on/off)

RESET Zoom = 1, Pan = center, Freeze = off, Video = 1

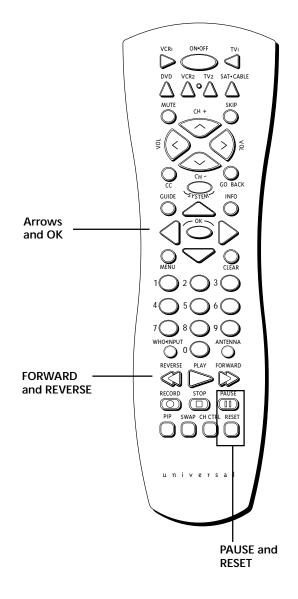

#### **BASIC MENUS**

The basic menus are accessible through basic remote controls and the front panel. Which menu items are available will depend on the restrictions set by the master user and the active input. For instance, if *Basic Menu Access* has been set to *Disabled* in the Access and Power Options menu, the basic menus and many features will not be available. Also, except for some Parental Controls settings, many of the changes made in the basic menu will revert back to their master menu settings the next time the TV is turned on. Many of the basic menu items function exactly the same as their master menu counterparts. This section describes only what is different or unique about the basic menus. (See the "Quick Guide To the TV" and "Master Menus" chapters for more details on the master menus.)

# MAIN MENU 1 Channel Guide 2 Menu Language/Idioma/Langue 3 Closed Captioning 4 Time and Timers 5 Picture Presets 6 Audio Processor 7 Parental Controls 8 PC Video Input Controls 0 Exit

If the PC input\* is not selected, the eighth item will not appear.


#### **CHANNEL GUIDE**


The basic menu's Channel Guide functions the same way as the master menu's Channel Guide. It is available by pressing the GUIDE button on the remote. See the "Master Menus" chapter for more information.

CHANNEL GUIDE				
03	WPTF	19		
04	NBC	28	NVC	
05	FEWWERTS	29	FEWWERTS	
07	GRW	48		
08	FOX	57	FOWTRF	
10	MOVIE	59		
12	ABC	112	ABCLIVE	
13	GT	114		
Use ^v to view all channels. Press MENU to exit.				

#### **MENU LANGUAGE**

Changing the menu language affects only the menus, not the audio language. The Menu Language choices are: *English, Spanish* or *French.* 



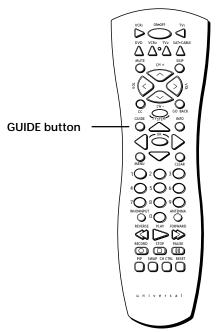


Basic users can access some menus directly using remote control buttons.

<sup>\*</sup> The PC input is only available on models J27530, J32530, and J36530.

#### **CLOSED CAPTIONING MENU**

This menu functions the same way as the Closed Captioning item in the master Channel menu. It is also available by pressing the CC button on the remote. See the "Master Menus" chapter for more information.

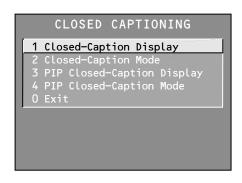

#### TIME AND TIMERS MENU OR SLEEP TIMER

The Time and Timers choice will not appear in the basic menu if the Schedule and Set Time features are disabled and the master user has not set the current time. Instead, Sleep Timer will be the fourth menu choice.




Basic Main menu showing Sleep Timer as the fourth option.

**Current Time** This choice will not be available if *Set Time* is disabled and the master user has not set the current time. This choice will be available but will not be able to be set if *Set Time* is disabled in the Access & Power Options menu, but the master user has set the time or if *Set Time* is set to anything but *Basic* (unless an invalid time is received).

**Sleep Timer** This feature will not be available if *TV Power Config.* is set to *Always* in the Access & Power Options menu.


**Schedule** This choice will not be available if Schedule has been disabled by the master user or *TV Power Config.* is set to *Always* in the Access and Power Options menu.



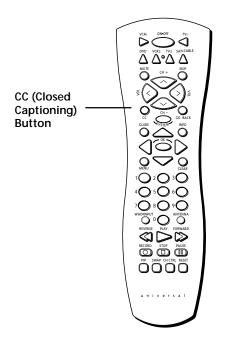

#### PICTURE PRESETS MENU


This menu functions very similarly to the *Picture Preset* item in the master Picture Quality menu. See the "Master Menus" chapter for more information.

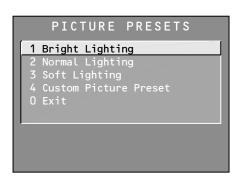

# MAIN MENU 1 Channel Guide 2 Menu Language/Idioma/Langue 3 Closed Captioning 4 Time and Timers 5 Picture Presets 6 Audio Processor 7 Parental Controls 8 PC Video Input Controls 0 Exit

#### **AUDIO PROCESSOR MENU**

This menu functions the same way as the Audio Processor choice on the Master Audio menu. See the "Master Menus" chapter for more information.

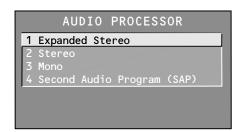


#### PARENTAL CONTROLS MENU

If the master user has selected *NoBasic* as the *Parental Controls* setting in the Access & Power Options menu, *Parental Controls* will not appear on the basic menu.



Otherwise, all accessible options will appear in the Parental Controls menu. If only one option is available, selecting *Parental Controls* will take the user directly into that option's control panel.

In the TV and Movie Rating control panels, pressing the SKIP button on a basic remote sets the highlighted rating to *View* (*V*). See the "Master Menus" chapter for more information.

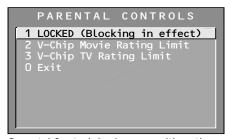


Parental Controls basic menu with options limited by master user.

#### PC VIDEO INPUT CONTROLS


This feature is only available on models J27530, J32530, and J36530.

This option functions the same way as the PC Video Input Controls item in the master menu. It will only appear when the TV is tuned to the PC input. See the "Master Menus" chapter for more information.

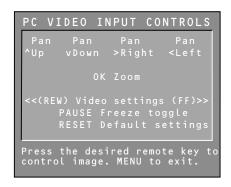


#### PC Video Input Controls Quick Reference

Arrow Up Pan picture up Arrow Down Pan picture down Pan picture left **Arrow Left** Arrow Right Pan picture right OK Zoom states (1x, 2x) **FORWARD** Video settings (1, 2, 3, 4) REVERSE Video settings (4, 3, 2,1) **PAUSE** Freeze toggle (on/off) RESET Zoom = 1, Pan = center, Freeze = off, Video = 1

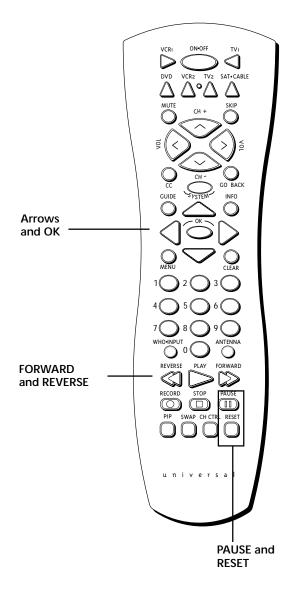


#### **BACK OF TV: BY MODEL**

This manual covers TV models that have different back panels. Match the back panel of your TV to one of the back panels shown below or on the next page.

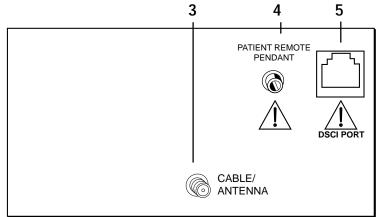

Model J20541

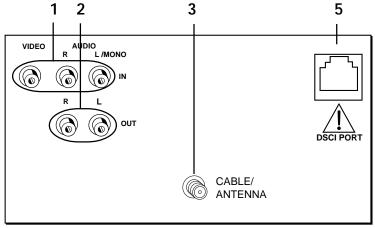

Models J25420 and J20420

# 1 VIDEO INPUT, AUDIO RIGHT, and L/MONO IN Jacks

Used to connect video devices, such as VCRs, camcorders, laserdisc players, home computers, or TV games with audio/video outputs.

#### 2 AUDIO RIGHT and L/MONO OUT Jacks

Allows connection of external audio amplifiers, powered speakers, or other devices with line-level audio inputs. Note that these outputs cannot drive standard speakers directly.

#### 3 CABLE/ANTENNA Jack

Used to attach either a home antenna or cable system to your TV.

#### **4** PATIENT REMOTE PENDANT


Used to connect to pillow speaker, nurse-call system, or other device to supply speaker-level audio or accept remote control. The connector is a stereo (3-wire) phone jack. For more information on its connection and operation, please contact your RCA distributor or the supplier of the nurse-call system.

#### 5 DSCI PORT


Formerly called a "Smartplug," this port is used to transfer information between a TV and other devices, such as a clone box or interactive system. This port is an eight-pin telephone-type port. For more information on its connection and operation, please contact your distributor or the supplier of the interactive system.

#### **BACK OF TV: BY MODEL**

This manual covers TV models that have different back panels. Match the back panel of your TV to one of the back panels shown below or on the previous page.

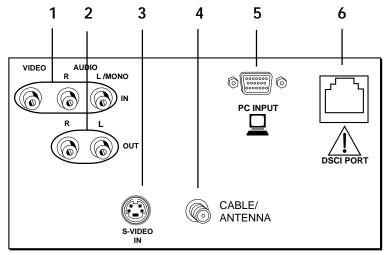

Models J27530, J32530, and J36530

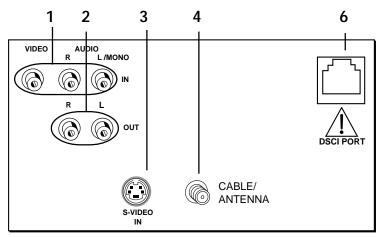

Models J32430 and J27430

# 1 VIDEO INPUT, AUDIO RIGHT, and L/MONO IN Jacks

Used to connect video devices, such as VCRs, camcorders, laserdisc players, home computers or TV games with audio/video outputs.

#### 2 AUDIO RIGHT and L/MONO OUT Jacks

Allows connection of external audio amplifiers, powered speakers, or other devices with line-level audio inputs. Note that these outputs cannot drive standard speakers directly.

#### 3 S-VIDEO (S-VHS) Connector

Used to connect devices with S-Video capability (an S-Video cable is required).
Remember to connect audio cables as well, because the S-Video cable carries only video.
(For more information, see Auto Tuning in the "Master Menus" chapter.)

#### 4 CABLE/ANTENNA Jack

Used to attach either a home antenna or cable system to your TV.

#### **5** PC INPUT


Used to connect the TV to a personal computer or similar VGA device. See description below for more information.


#### **6** DSCI PORT

Formerly called a "Smartplug," this port is used to transfer information between a TV and other devices, such as a clone box or interactive system. This port is an eight-pin telephone-type. For more information on its connection and operation, please contact your distributor or the supplier of the interactive system.

#### PC INPUT CONNECTION

(This connection only works with models J27530, J32530, and J36530.)

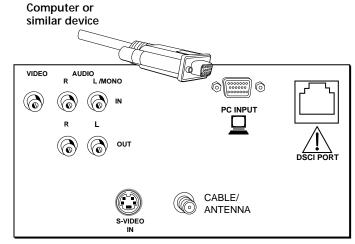

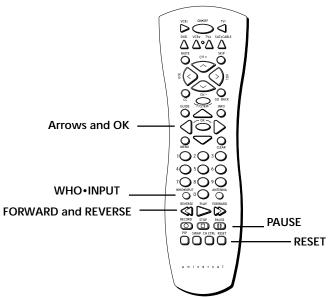

#### **PC Video Input Controls Quick Reference**

Arrow Up Pan picture up Arrow Down Pan picture down **Arrow Left** Pan picture left Arrow Right Pan picture right OK Zoom states (1x, 2x) **FORWARD** Video settings (1, 2, 3, 4) REVERSE Video settings (4, 3, 2,1) **PAUSE** Freeze toggle (on/off) RESET Zoom = 1, Pan = center, Freeze = off, Video = 1

#### 1. Use This Connection To:

Receive video from a PC or similar component or to receive VGA or SVGA signals. (This monitor accepts signals with a resolution of up to 2048 x 1536 @ 152 hertz vertical refresh rate).

#### 2. Accessories Needed

One PC (VGA) cable

#### 3. Connect as Shown

#### 4. Operation

For more detailed instructions, see the "PC Video Input Controls" section of the "Master Menus" chapter.

- Make sure the PC Input has been added to the active channel list. (Check by pressing MENU, then choosing Channel, List and Labels, and Channel, Channel Selection.)
- Press the WHO•INPUT button on a universal remote control until you have selected the PC input ("PC" will appear on the upper right hand corner of the screen).
- To control the PC image, use a universal remote with the Quick Reference at left.


The Quick Reference information is also available on the screen: activate the PC input, press MENU, then choose *PC Video Input Controls*.

You can also program your remote control to automatically select the PC input when a component button is pressed. See the "Using the Remote" chapter for more information.

#### ANTENNA OR CABLE CONNECTION

(This connection works with all models.)

#### Match Your Type of Antenna or Cable

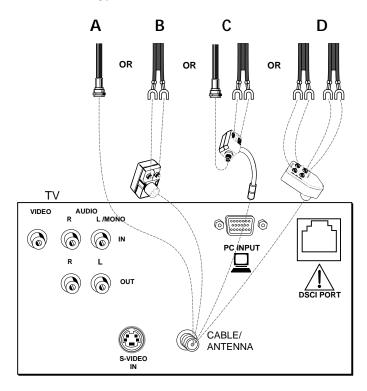

#### 1. Use This Connection To:

Connect an indoor or outdoor antenna, or cable that does not require a cable box, to the TV.

#### 2. Accessories Needed


Some antennas require an adapter. Use the diagram at the left to determine if one is needed.


#### 3. Connect as Shown

- A. Connect the antenna or cable to the TV using option A if the cable is a round, coaxial cable that carries only VHF or UHF.
- B. Connect the antenna to the TV using option B if your cable is a flat, twin-lead cable that carries only VHF or UHF.
- C. Connect the antenna to the TV using option C if the cable(s) are one round, coaxial cable that carries VHF and one flat, twin-lead cable for UHF.
- D. Connect the antenna to the TV using option D if the cables coming from the antenna(s) are two flat, twin-lead cables.
- 4. Follow the Steps in the "Quick Guide to the TV" Section.

#### **CABLE BOX CONNECTIONS**

(These connections work with all models.)

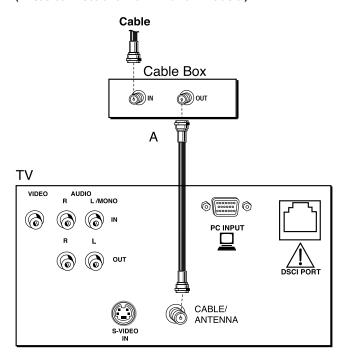

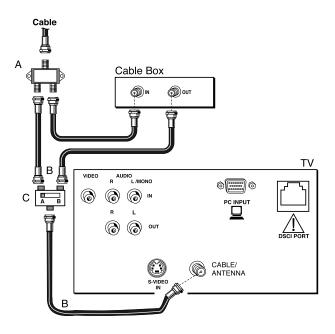

#### 1. Use This Connection To:

Connect a cable box that can be controlled using a remote.

#### 2. Accessories Needed

A. One coaxial cable

#### 3. Connect as Shown

4. Follow the Steps in the "Quick Guide to the TV" Section.

#### 1. Use This Connection To:

Connect a cable box that cannot be controlled using a remote. This connection is usually used for premium channels such as Disney, Showtime, etc.

#### 2. Accessories Needed

- A. One signal splitter
- B. Four coaxial cables
- C. A-B switch

#### 3. Connect as Shown


#### 4. Operation

Place the A-B switch in the "A" position to watch non-cable box channels. Place the A-B switch in the "B" position to watch cable box channels. Remember to tune the TV to the cable box output channel (usually 2, 3 or 4).

5. Follow the Steps in the "Quick Guide to the TV" Section.


#### CABLE BOX AND VCR BASIC CONNECTION

(This connection works with all models.)

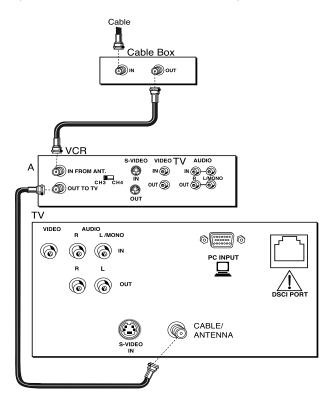

# VCR BASIC CONNECTION

(This connection works with all models.)

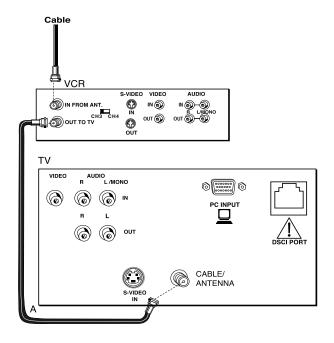

#### 1. Use This Connection To:

Connect a VCR cable box for premium channels.

- 2. Accessories Needed
- A. Two coaxial cables
- 3. Connect as Shown

#### 4. Operation

Tune the TV to the same channel as the position of the VCR's CH3/4 switch.

Tune the VCR to the output channel of the cable box, usually 2, 3, or 4.

Switch between the cable and VCR signals by pressing the TV/VCR button on the VCR.

5. Follow the Steps in the "Quick Guide to the TV" Section.

#### 1. Use This Connection To:

Connect a VCR to the TV.

- 2. Accessories Needed
- A. One coaxial cable
- 3. Connect as Shown

#### 4. Operation


Tune the TV to the same channel as the position of the VCR's CH3/4 switch.

Switch between the cable and VCR signals by pressing the TV/VCR button on the VCR.

5. Follow the Steps in the "Quick Guide to the TV" Section.


#### CABLE BOX AND VCR ADVANCED CONNECTION

(This connection does not work with model J20541.)

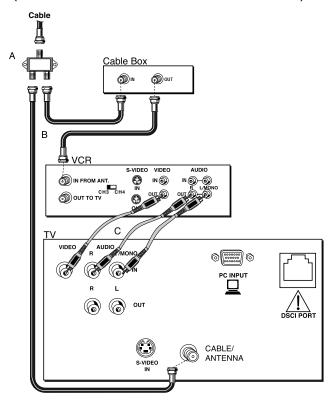

#### VCR INTERMEDIATE CONNECTION

(This connection does not work with model J20541.)

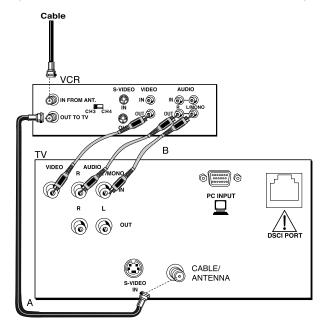

#### 1. Use This Connection To:

Connect a cable box for premium channels and a VCR.

Record a scrambled (premium) channel on the VCR at the same time you are watching an unscrambled channel through the TV.

#### 2. Accessories Needed

- A. One signal splitter
- B. Three coaxial cables
- Two audio/video cables for mono VCRs or three audio/video cables for stereo VCRs

#### 3. Connect as Shown

#### 4. Operation

To record or watch premium channels, turn on the TV, VCR and cable box. Tune the TV to the video input (usually VID) to see the signal coming through the VCR. Then tune the VCR to the cable box output channel (usually 2, 3 or 4).

# 5. Follow the Steps in the "Quick Guide to the TV" Section.

#### 1. Use This Connection To:

Receive stereo broadcasts from a stereo VCR Hear stereo playback from a stereo VCR

#### 2. Accessories Needed


- A. One coaxial cable
- B. Two audio/video cables for mono VCRs or three audio/video cables for stereo VCRs

#### 3. Connect as Shown

4. Follow the Steps in the "Quick Guide to the TV" Section.

#### VCR ADVANCED CONNECTION

(This connection does not work with model J20541.)

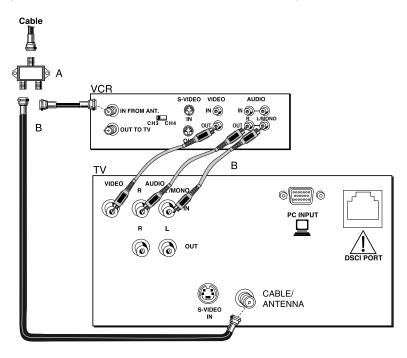

1. Use This Connection To:

Receive stereo broadcasts from a stereo VCR.

Hear stereo playback from a stereo VCR.

Record one channel with a VCR and watch a different channel on TV.

#### 2. Accessories Needed


- A. One signal splitter
- Two coaxial cables
- C. Two audio/video cables for mono VCRs or three audio/video cables for stereo VCRs

#### 3. Connect as Shown

4. Follow the Steps in the "Quick Guide to the TV" Section.

#### AUDIO CONNECTION

(This connection does not work with model J20541.)

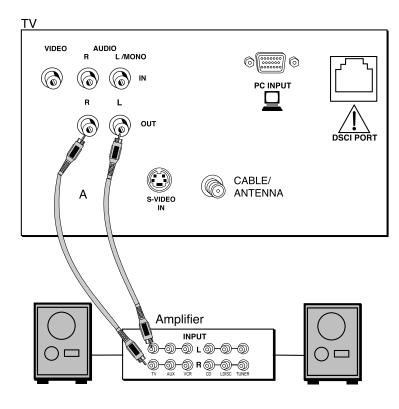

#### **Audio Cassette Recorder or Amplifier**

Use this connection if your amplifier is not part of a system with its own remote. Consult the amplifier's owner's manual for the recommended hookup.

This TVs enhanced stereo imaging and effects work best when used with the TV's own speakers. If external speakers are used, this enhanced stereo effect may decrease.

#### 1. Use This Connection to:

Adjust and mute amplifier volume with the TV's remote.

#### 2. Accessories Needed:


A. Two audio/video cables

#### 3. Connect as Shown

Connect the AUDIO OUT (RIGHT AND L/MONO) jacks to the corresponding input jacks on the stereo amplifier.

#### **FRONT PANEL**

If you cannot locate your remote you can use the front panel of your TV to operate basic user features. For details on using buttons with menus, see the "Quick Guide To the TV" chapter.

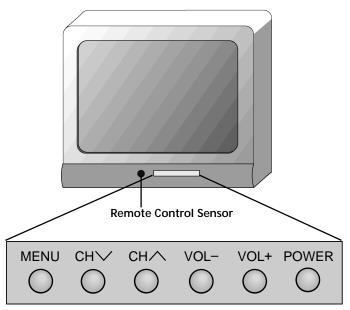

The front panel above shows a typical button layout. The exact look of the buttons may be different from those on the front of your TV.

Note that front-panel access may be blocked by master menu settings. See the "Master Menus" chapter for more information.

**MENU** Brings up the basic Main menu. When in the menu system, it selects highlighted items.

**CH v** Scans down through the channel list and brings up the basic status display. In the menu system, it points down to items and adjusts menu controls.

**CH** ^ Scans up through the channel list and brings up the basic status display. In the menu system, it points up to items and adjusts menu controls.


**VOL** – Decreases the volume. When in the menu system, VOL – is used to point left to items and adjust menu controls.

**VOL** + Increases the volume. When in the menu system, VOL + is used to point right to items and adjust menu controls.

**POWER** Turns the TV on and off.

#### STATUS DISPLAYS

This display shows the status of several features. Several remote control and front panel buttons trigger this display, including INFO.

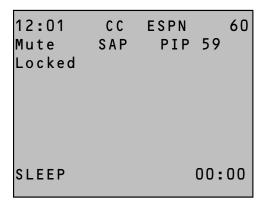

Sample Status Display

12:01 Displays the current time.

**CC** Displayed when Closed Captioning is available on the current channel.

**ESPN** Displays the label assigned to the current channel.

**60** Displays the current main picture window channel or signal input (CH3, CH4, VID, SVID,\* or PC\*\*).

**Mute (or Stereo)** Mute is displayed when you mute the audio. Stereo is displayed when the current channel is broadcasting in Stereo.

**SAP** Displayed when the current channel is broadcasting SAP (Second Audio Program) information.

**PIP 59 (PIP Chan)**\*\* Displays the current Picture-In-Picture (PIP) channel or signal input (CH3, CH4, VID, SVID,\* or PC\*\*).

**SLEEP** Displayed when the Sleep Timer has been set.

**Locked** Displayed when Parental Controls are locked.

**00:00** Displays time left on the commercial skip (SKIP) timer.

<sup>\*</sup> The S-Video input is not available on models J20541, J25420, or J20420.

<sup>\*\*</sup> The PC input and PIP feature are only available on models J27530, J32530, and J36530.

#### **TROUBLESHOOTING**

Most problems you encounter with this TV can be fixed by consulting the following list. Unless otherwise specified, suggestions in this list refer to the master remote and menus. Remember that not all features are available on all models. To contact the nearest RCA Service Center call 1-800-880-5966.

#### TV will not turn on

- Check to make sure it is plugged in.
- Check the wall receptacle (or extension cord) to make sure it is "live" by plugging in something else.
- Maybe batteries in remote control are "dead."
- Maybe remote control is not aimed at remote sensor.
- TV power or remote configurations may prevent the TV from turning on. Use a master remote control to change menu settings.

#### TV turns on or off unexpectedly

- The Scheduled Off or Scheduled On function may have been activated in the Time and Timers menu.
- An electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn on again. If this happens frequently, the voltage in your house may be abnormally high or low.
- The Sleep Timer or Energy Saver function may have turned the TV off.
- Unplug. Wait five minutes. Plug in again.

#### No picture or bad reception

- Try another channel.
- Check antenna connections.
- If watching video from an external component, make sure the component is connected from its OUT jacks to the TV IN jacks. Make sure the component is turned on.
- Press RESET, in case the picture controls are set too low.
- If using a VCR (connected only through antenna input), make sure TV is tuned to channel 3 or 4—the same as CH3/4 switch on VCR.
- If using a VCR, make sure the TV/VCR button on the VCR is in the correct "mode."
- Weak Signal Muting and Blanking may be on (from the Main menu, select Channel Menu, then Signal Source).
- Try adjusting sharpness to improve weak signals (from the Main menu, select Picture Quality, then Picture Adjustments).

#### Black box appears on the screen

Closed Captioning may be turned on and in text mode. Check the Closed-Caption Display control panel by pressing CC
on the remote control or through the Main menu.

#### No sound, picture okay

- Maybe sound is muted. Try pressing the VOL ^ button to restore sound.
- Maybe speakers are turned off. Check the Audio Output and Speakers control panel in the Audio menu.
- If using an S-VHS connection, remember to also connect the component's L and R AUDIO OUT jacks to the TV's L and R INPUT jacks.
- Maybe Maximum Volume is set very low. Check the Audio Levels control panel in the Audio menu.

#### Noisy stereo reception

May be a weak station. Select Mono in the Audio Processor control panel of the Audio menu.

#### Problems with remote

- Maybe something is between the remote and the remote sensor.
- Maybe the remote is not aimed directly at the device you are trying to control.
- Operation of certain remote control buttons might be restricted by master menu settings.
- If using a remote with component buttons, maybe remote is not in TV mode. Press the TV button so remote will control TV. See also the "Input Signal Problems" description later in this section.
- Maybe remote is in wrong configuration (TV1 or TV2) for that TV. Check the *Remote Configurations* setting in the Access and Power Options menu. See the "Master Menus" chapter for more details.
- Maybe batteries in remote are weak, dead, or installed incorrectly. Try replacing batteries. (If you have a programmable remote and remove the batteries, you may have to reprogram the remote to control other components.)
- Remove batteries and hold the 1 button for at least 60 seconds to drain the microprocessor inside the remote. Release the 1 button, replace the batteries, and (if necessary) reprogram the remote.

#### **PIP Problems**

See the "PIP Problems?" section in the "Using the Remote" chapter.

#### Can't select certain channel

- Channel may be blocked or not approved in the Parental Controls menu.
- Channels and inputs not in the current channel list cannot be accessed except through the master Channel menu.
- If using a VCR, check to make sure the TV/VCR button on the VCR is in the correct "mode."

#### Input signal problems

- Make sure that the input channel choice in the Auto Tuning menu matches the component's physical connection. For example, if you have set the VCR1 button to CH4 in Auto Tuning, but the VCR is connected by Audio/Video cables or an S-Video cable, you will see normal channel 4 programming when the VCR1 button is pressed. See the Auto Tuning description under the "Channel Menu" section in the "Master Menus" chapter for further instruction.
- Make sure your connection is correct: cables should run from the component OUT jacks to the TV IN jacks.
- Inputs (VID, SVID, PC) are not available unless they have been manually added to the channel list.

#### Menu problems

- Menu access may be blocked by clone box programming.
- Try unplugging the TV for two minutes and then plug it back in and turn it on.
- The Energy Saver settings will not work if TV Power Config. is set to Always in the Access and Power Options menu.
- The basic menu options might be restricted by master menu settings.
- PC Video Input Controls only appears in the Main menu if the PC input is selected. See "PC Input Video Controls," in the "Main Menus" chapter, for more information.
- The clone box may have disabled master menus.
- Sleep and Schedule functions won't work if TV Power Config. is set to Always.
- The PC Video Input Controls option will appear when the PC input is selected regardless of whether there is anything connected to the PC INPUT jack.

#### Forgot password

• Use the master remote to enter a new password.

#### Rating limits don't work

• You must lock the parental controls (from the Main menu, select Parental Controls, then Lock Parental Controls).

#### Program is blocked and it shouldn't be

- It may be a Not Rated (NR) movie. After you block movie ratings, you must set NR to View separately in order to view movies with an NR rating (from the Main menu, select *Parental Controls*, then *V-Chip Movie Rating Limit*).
- It may be an unrated television program. To unblock unrated television programs, select *Parental Controls* from the Main menu, then select *V-Chip TV Rating Limit* and set *unrated* to *V*.
- Inputs (VID, SVID, PC) are not available unless they have been manually added to the channel list.

CAUTION: If fixed (non-moving) images are left on the screen for long periods, they may be permanently imprinted on the picture tube. Such images include network logos, phone numbers, and video games. This damage is not covered by your warranty. Extended viewing of channels displaying these images should be avoided.

#### Care and Cleaning

CAUTION: Turn OFF your TV before cleaning.

You can clean the TV as required, using a soft lint-free cloth. Be sure to occasionally dust the ventilation slots in the cabinet to help assure adequate ventilation.

The TV's screen may be cleaned with a soft, lint-free cloth as well. Take care not to scratch or mar the screen. If necessary, you may use a cloth dampened with warm water.

Never use strong cleaning agents, such as ammonia-based cleaners, or abrasive powder. These types of cleaners will damage the TV.

While cleaning do not spray liquid directly on the screen, or allow liquid to run down the screen and inside the TV. Also, avoid placing drinks or vases with water on top of the TV. This could increase the risk of fire or shock hazard or damage to the TV.

For models J27530, J32530, and J36530 only:

# FCC DECLARATION OF CONFORMITY AND INDUSTRY CANADA INFORMATION

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Note: This equipment has been tested and found to comply with the limits for the Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).

Change the position of the TV/PC Monitor with respect to the radio or television equipment that is receiving interference.

Move the TV/PC Monitor away from the equipment that is receiving interference.

Plug the TV/PC Monitor into a different wall outlet so that the TV/PC Monitor and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

For more information on FCC conformity: Thomson Consumer Electronics, Inc., 10330 N. Meridian St., Indianapolis IN 46290; 1-800-587-5850.

# **WARRANTY**

#### COMMERCIAL PRODUCTS LIMITED WARRANTY

What your warranty covers: Any defect in materials or workmanship.

For how long after your

One year for labor charges.

purchase:

One year for parts.

Two years for picture tube.

(The warranty begins at time of first installation or 45 days after shipment,

whichever comes first.)

What we will do: Pay any Authorized RCA Commercial Television Service Center the labor charges to

repair your television.

Pay any Authorized RCA Commercial Television Service Center for the new or, at our option, refurbished replacement parts and picture tube required to repair your

television.

How you get service: Request service from any Authorized RCA Commercial Television Service Center at

your place of business.

To identify your nearest Authorized RCA Commercial Television Service Center, ask

your distributor, look in the Yellow Pages, or call 1-800-880-5966.

Show the Authorized Service Center Representative your sales receipt or other

evidence of purchase date or first rental.

What your warranty does

not cover:

Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your television. Any additional information should be obtained from

your distributor.)

Installation and related adjustments.

Acts of God, such as, but not limited to lightning damage.

Signal reception problems not caused by your television.

Damage from misuse or neglect.

Batteries.

Images burnt onto the screen.

A television that has been modified or incorporated into other products.

A television purchased or serviced outside the USA.

In-room service.

**Product registration**: Please complete and mail the Product Registration Card packed with your TV. It will

make it easier to contact you should it ever be necessary. The return of the card is

not required for warranty coverage.

How state law relates to

this warranty:

This warranty gives you specific legal rights, and you may also have other rights that

vary from state to state.

If you purchased your product outside the USA:

This warranty does not apply. Contact your distributor for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

# INDEX

Α	D	P
Access, controlling 22 Age-Based Ratings 31, 32	DSCI PORT 45 DVD button 10	Panning 39 Parental Controls 23, 28, 36, 43
Alarm menu 4 Antenna 45, 48	E	Password 37 PC INPUT 46
button 11 Audio 17	Energy Saver 22 Exiting menus 5	PC Video Input Controls 38, 44 Connection 47
Auto Tuning 21	F	Pendants 7 Picture Quality menu 19
В		Picture Tilt 19
Back of TV 45, 46 Basic	Fixed images 57 Fixed output 18	Pillow speaker 7 Point and Select 4
menus 5, 41	Freeze toggle 39 Front panel 23, 53	Problems coluing FF
picture controls 19 remotes 9	Tront paner 23, 33	Problems, solving 55 Programming the remote 13
Batteries 3, 55 Black Level 19		R
Blocking programs 37	INFO button 10 INPUT button 8, 9, 12	Rating Limits
Buttons 10 front panel 53	Inputs, assigning 21	Movie 29 TV 30
INPUT 12 remotes 8, 9, 10	J	RECORD button 13
SYSTEM 12	Jacks 45, 46	Remote control 7 basic 9
С	L	batteries 3, 56 buttons 8, 9, 10, 12
Cable box connections 49, 50	Labels 20	codes 16
Cable TV 45, 48 Care and cleaning 57	LED light 10 Limits, establishing 22	hospital 7 master 3, 8
CC (Closed Captioning) 25, 54 Channel	M	problems with 55 programming 13
block 28, 36	Master	universal 10 with two TVs 22
CH3/4 inputs 21 in memory 4	menus 17 remotes 8	Reset 39 RESET button 8, 11, 19, 20, 39
lists 20 menu 20	Memory 4	RESET BULLOTT 6, 11, 17, 20, 37
search 20 CLEAR button 8, 9, 11	MENU button 8, 9, 11, 53 Menu Language 41	
Clone box 4, 45, 46	Menus 5, 17, 41	
Closed Caption 25, 55 Codes	Mono 17 Movie rating limits 23, 28, 29	
remote 16	MUTE button 8, 9, 10, 17	
Color settings 19 Color warmth 19		
Connections 48		
Content Themes 31, 34 Contrast 19		

# INDEX

S	U
SAP (Second Audio Program) 17, 54 SAT • Cable channel 21 Scan Converter 38 Schedule 26	UHF/VHF antenna 20 Universal remotes 10 Unlocking Parental Controls 36 Unrated programs 28, 36 Unusable Signal 20
Screen settings 19 Set input channel 21	V
Set Time 26 Signal Type 20, 21 SKIP button 9, 10 Sleep Timer 26, 42, 54 Speakers 18, 52 Status Display 54 Stereo 17, 54 SVGA, viewing signal 38 SYSTEM button 12 T Tilt 19 Time 4, 26, 42, 54 Tint 19 Troubleshooting 55 TV controlling two 22 rating limits 23, 28, 30 TV button 10	V-Chip  Movies 29 Ratings 28, 32 Themes 28, 34 Variable speaker output 18 VCR  Auto Tuning 21 button on remote 10 connection 50, 51, 52 recording 11 VGA connection 47 input jack 46 VGA, viewing signal 38 Video settings 39 W Warranty 59 WHO•INPUT button 11 Z Zooming 39

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

#### **♦ THOMSON CONSUMER ELECTRONICS**

10330 North Meridian Street Indianapolis, IN 46290

©2000 Thomson Consumer Electronics, Inc. Trademark(s)® Registered Marca(s) Registrada(s) Printed in USA TOCOM 1545514A The following materials were used in printing this publication:

